ΗΙΟΚΙ

AC CLAMP METER 3280-10F, 3280-20F

Bugged & Compact

HIOKI 280-20F True RMS

AC CLAMP METER

Ω/Ξ

CAT II BOOV

AC FLEXIBLE CURRENT SENSOR (option) φ130 mm (5.12") 4200 A AC

Use with an AC Clamp Meter to measure large wires and currents.

Attachment (Included with AC Flexible Current Sensor)



Tip is fixed in an L-shape for easy manipulation in confined spaces HIOKI CTBABD ACFLENDE CURRENT SENBOR CATE BOOV CATE BOOV CATE BOOV

Pocket size



 
Broad operating temperature range



Mechanically robust design *AC Elexible Current Sensor optional.

*AC Flexible Current Sensor optional. Also available as part of a value-priced set.






0

AC CLAMP METER φ33 mm (1.30") 1000 A AC

Essential equipment for professional electricians: Measure current and voltage with a single instrument!

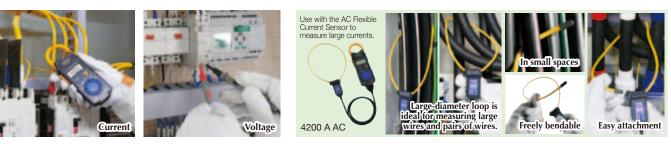

Specifications Basic accuracy figures for measurement ranges are indicated in parentheses. Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year, Product warranty period is 3 years.

	3280-10F	3280-20F	
AC measurement method	MEAN value	True RMS	
Core jaw diameter	φ33 mm (1.30"), jaw thickness: 9.5 mm (0.37")		
Max. rated voltage to earth	Jaw : CAT IV 300 V, CAT III 600 V Voltage measurement terminal : CAT III 300 V, CAT II 600 V		
AC Current	42.00 A/ 420.0 A/ 1000 A (±1.5% rdg.±5 dgt.)		
Frequency characteristics	50 to 60 Hz	40 Hz to 1 kHz	
AC Voltage	4.200 V to 600 V, 4 ranges (±1.8% rdg.±7 dgt.)		
Frequency characteristics	45 Hz to 500 Hz		
DC Voltage	420.0 mV to 600 V, 5 ranges (±1.0% rdg.±3 dgt.)		
Resistance	420.0 Ω to 42.00 MΩ, 6 ranges (±2.0% rdg.±4 dgt.)		
Continuity Check	420.0 Ω (±2.0% rdg.±4 dgt.) Threshold of buzzer sound 50 Ω±40 Ω or less		
Crest factor	-	2.5 or less (1.5 or less at 4200 counts)	
Display refresh rate	400 ms		

Operating temperature	-25°C to 65°C (-13°F to 149°F),				
and humidity	80% RH or less (no condensation)				
Storage temperature					
and humidity	80% RH or less (no condensation)				
Drop-proof distance	1 m onto concrete				
Dustproof and waterproof	IP40				
Standards	Safety : EN 61010, EMC : EN 61326				
Functions	Data hold, Auto power-saving function				
Power supply	Coin type lithium battery CR2032×1				
Continuous use	120 hours	120 hours 70 hours			
Dimensions and mass	57W×175H×16D mm (2.24"W × 6.89"H × 0.63"D), 100 g (3.5 oz.)				
AC FLEXIBLE CURRENT SENSOR CT6280 specifications					
Core jaw diameter	φ130 mm (5.12") (Cable cross-section diameter: 5 mm (0.20"); tip cap diameter: 7 mm (0.28"))				
AC Current	420.0 A/ 4200 A (±3.0% rdg.±5 dgt.) 40 Hz to 1 kHz				
Cable length	800 mm (31.5")				

Lineup

	AC CLAMP METER 3280-10F	AC CLAMP METER 3280-20F	AC CLAMP METER SET 3280-70F	AC CLAMP METER SET 3280-90F
AC measurement method	MEAN value	True RMS	MEAN value	True RMS
Order code	3280-10F	3280-20F	3280-70F	3280-90F
Includes	3280-10F CARRYING CASE 9398 TEST LEAD L9208 Coin type lithium battery CR2032 Instruction Manual	3280-20F CARRYING CASE 9398 TEST LEAD L9208 Coin type lithium battery CR2032 Instruction Manual	3280-10F AC FLEXIBLE CURRENT SENSOR CT6280 CARRYING CASE C0205 TEST LEAD L9208 Coin type lithium battery CR2032 Instruction Manual	3280-20F AC FLEXIBLE CURRENT SENSOR CT6280 CARRYING CASE C0205 TEST LEAD L9208 Coin type lithium battery CR2032 Instruction Manual
Image				

inverter (primary side)

Options

CARRYING CASE 9398 (bundled with the 3280-10F/ 3280-20F) AC FLEXIBLE CURRENT SENSOR CT6280

(includes C0205, attachment)

CARRYING CASE C0205 (bundled with the 3280-70F/ 3280-90F/ CT6280; fits CT6280, 3280-10F/ 3280-20F, and test leads) TEST LEAD L9208 (bundled Accessory) **TEST LEADS HOLDER 9209** CONTACT PIN SET L4933* SMALL ALLIGATOR CLIP SET L4934*



*Probe tips can be used on TEST LEAD L9208.

(3280-20F)

What is the difference between the Mean method and True RMS method?

 
MEAN method (MEAN value)

The input waveform is treated as an undistorted sine wave (single frequency only). The AC signal mean is calculated, converted to an RMS value, and displayed. The me rement error increases when the waveform is distorted.

True RMS method (True RMS)

The waveform including harmonic calculation formula and displayed. onic components is calculated according to an RMS

True RMS measurement yields accurate display values even when measuring a distorted waveform, for example from an inverter-equipped device or switching power supply.



There are two methods for converting current into RMS values: the mean method (mean rectification

) and the true RMS method (true RMS value indication). Although both methods

(3280-10F)

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.



HIOKI E.E. CORPORATION

HEADQUARTERS

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 http://www.hioki.com / E-mail: os-com@hioki.co.jp