

MEMORY HICORDER MR8740T





Perfect for multi-point measurements on high-performance boards

108 Channels of Simultaneous Testing

••• Delivering triple-digit multichannel measurement


Analog 108ch

Analog + Logic 144ch

 $\underset{\text{Max.}}{\text{Signal generation}} \, 216 ch$






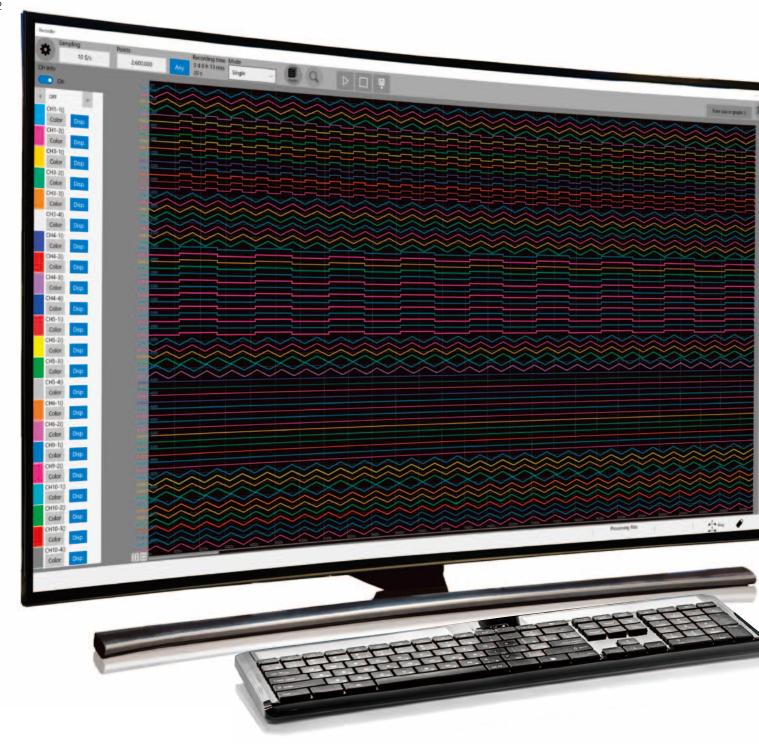

Compact, measures up to 108 channels

Multi-channel, reduced footprint

The MR8740T achieves testing of up to 108 channels, double that of conventional models, while maintaining the same unit size. Test high-performance ECU boards, with their ever-increasing number of test points, with a single measurement system. Make the most of your limited space for testing systems.

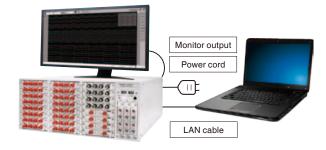

Isolated design for fault prevention

All channels isolated

Isolation of all channels prevents noise from connected devices, with no negative effect due to different ground potential. Eliminate faults and other trouble caused by mistaken wirings and over-voltages / over-currents due to shorted boards.



Between input channels

Between main unit and input channel

* Only the 8971 and 8973 units are



MEMORY HICORDER MR8740T

Analog Max. 108ch Test data transfer time

As artificial intelligence advances in automobiles and other advanced industries the need for technology to simultaneously process large volumes of data, as well as safety and security, has arrived. The MR8740T supports your testing needs with simultaneously sampled measurements across multiple channels.







Simultaneous sampling on all channels




*1: When using 8966 *2: When using MR8990, U8991

Transfer time for test data reduced to almost zero

Minimize dead time while testing

Previously, calculations and saving/transferring data after measurements were slow processes, and much of the testing time was taken up by dead time while waiting to perform the next test. The MR8740T dramatically reduces the time both for calculations and saving data, almost completely eliminating dead time while performing tests.



Save recorded data 100 times faster

Minimize the time required to save on devices and media

The MR8740T features a brand new interface and faster internal processing, reducing the time required to save measurement data to media. For example, saving that required 10 minutes previously can now be completed in as little as 6 seconds. This saves you the trouble of waiting for data to be saved and improves work efficiency.

Legacy models	USB 2.0	
	036 2.0	1/20 of conventional models
MR8740T	USB 3.0	1/30 of conventional models
	Internal SSD	1/100 of conventional models

Save data in real time NEW




Save data while measurement is ongoing

The MR8740T saves data in real-time to recording media while measurement is ongoing thanks to a combination of high-speed data transfer performance and high-speed data saving performance. For example, if saving data to the internal SSD, the instrument can save 64 channels of data in real time at a sampling rate of 1 MS/s.



Applications

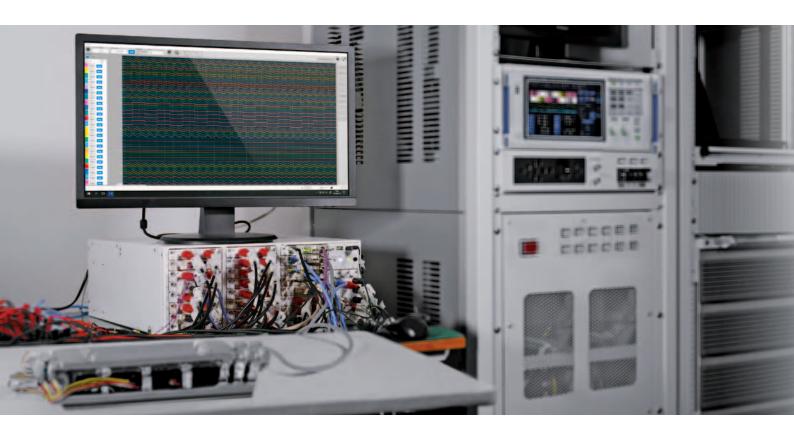

Control simulation

Generating and measuring signals with a single device eliminates the need to prepare separate measurement and generator devices.

Simulated output of various sensor signals and control pulse signals allows you to simulate the test waveforms (DC output, sine wave output) of engine controls for automobiles, high speed trains, and airplanes, and control boards for airbags, brake systems, power steering, and active suspension.







Airbag control test

Brake system control test

Engine control test

Tests using distortion measurements

Input the analog signal from a strain gauge or extensometer and the analog signal from a stress sensor.

Use the scaling function to convert those values to tensile strain, and to convert the stress sensor value to tensile stress.

Measure analog and logic at the same time, to simultaneously record a variety of signals with a single test.







Measure stress in moving parts of industrial robots



Multi-point measurement of propellers on wind power generators, etc.

ECU Testing

ECUs are connected to a large number and wide variety of sensors. Add a signal generation unit to simulate these sensors. By measuring the simulation results with a measurement unit at the same time, you can perform all steps from signal generation to measurement with a single MR8740T.

The U8794 also offers resistance output to enable thermistor circuit testing.




Replace multiple DMMs with a single unit

Replace multiple desktop DMM units with a single MEMORY HiCORDER for measuring multi-channel sensors. Select from the MR8990 2-channel unit with a wide range, or the U8991 4-channel unit to measure multiple channels. In addition to reducing the number of units required, system simplification makes maintenance and management easier.

Expandable to a maximum of 108 channels using multiple 4-channel

108 Benchtop DMMs





Comparison of DIGITAL VOLTMETER UNIT MR8990 and U8991

External appearance	The second secon	TO THOUSE OF O	
Model No.	MR8990	U8991	
Measurement functions	No. of channels: 2, for DC voltage measurement	No. of channels: 4, for DC voltage measurement	
Input terminals	Banana input terminal Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)	in isolated from the unit, the maximum voltage that ca	
Measurement range	100, 1000 mV f.s. 10, 100, 1000 V f.s., 5 ranges	1, 10, 100 V f.s., 3 ranges	
Measurement resolution	1/1,000,000 of measurement rang	e (using 24-bit ΔΣ modulation A/D)	
Integration time	20 ms × NPLC (during 50 Hz), 1	6.67 ms × NPLC (during 60 Hz)	
Basic measurement accuracy	±0.01% rdg. ±0.0025% f.s. (at range of 1000 mV f.s.)	±0.02% rdg. ±0.0025% f.s.	
Maximum input voltage	500 V DC (the maximum voltage that can be applied across input pins without damage)	100 V DC (the maximum voltage that can be applied across input pins without damage)	


Specifications for DC voltage measurements

Measure minute fluctuations in sensor output for automobiles or voltage fluctuations in batteries with high precision and at high resolution. The maximum voltage input is 500 V DC for the MR8990 and 100 V DC for the U8991. Both units also feature high input resistance.

Real-time Save

Save data while measurement is ongoing, even with extended recording, high-speed sampling, and numerous channels

The MR8740T offers real-time save functionality that saves data to recording media while measurement is ongoing. Hioki recommends using the instrument's large internal SSD unit when you need to record data for extended periods of time. If you wish to save data after measurement has completed, you can specify a USB drive as the save destination. Additionally, you can use the real-time save function to control how long the instrument can continue measuring without being dependent on the amount of built-in storage memory. Files are saved as 512 MB segments when using the real-time save function.

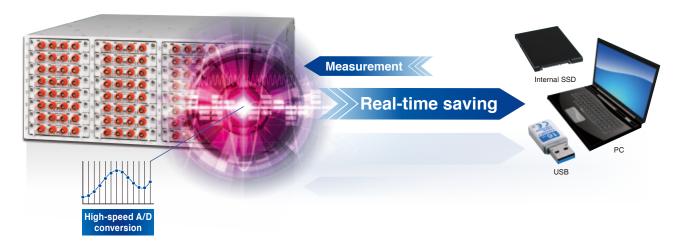

Real-time save capabilities when measuring 108 channels

Save destination	Number of channels	Sampling speed	Supported measurement time	Maximum sampling speed at which real-time saving is supported*1
Internal SSD (480 GB)	108 ch	500 kS/s	About 1 hr.	5 MS/s (12 channels)
USB Drive Z4006 (16 GB)	108 ch	100 kS/s	About 10 min.	1 MS/S (12 channels)*2
PC	108 ch	20 kS/s	Depends on PC capacity	200 kS/s (12 ch)

^{*1:} For 2 channels (no settings for channel 1) *2 When connected via a USB 3.0 connector only.

Maximum sampling speeds at which real-time saving is supported

Save destination				
Save desimation	Up to 12	12 to 32	33 to 64	65 or more
Internal SSD	5 MS/s	2 MS/s	1 MS/s	500 kS/s
USB Drive Z4006	1 MS/s *2	500 kS/s *2	200 kS/s *2	100 kS/s *2
PC	200 kS/s	100 kS/s	50 kS/s	20 kS/s

^{*1:} Double channel counts if U8991 is installed. *2: When connected via a USB 3.0 connector only.


Amount of time for which data can be saved in real time to internal SSD (reference values)

d: Days h: Hours min: Minutes s: Seconds

0	Number of channels used							
Sampling speed	Up to 12 13 to 32		33 to 64	65 or more				
5 MS/s	50 min	-	-	-				
2 MS/s	2 h 05 min	1 h 02 min 30 s	-	-				
1 MS/s	4 h 10 min	2 h 05 min	1 h 02 min 30 s	_				
500 kS/s	8 h 20 min	4 h 10 min	2 h 05 min	1 h 02 min 30 s				
200 kS/s	20 h 50 min	10 h 25 min	5 h 12 min 30 s	2 h 36 min 15 s				
100 kS/s	1 d 17 h 40 min	20 h 50 min	10 h 25 min	5 h 12 min 30 s				
50 kS/s	3 d 11 h 20 min	1 d 17 h 40 min	20 h 50 min	10 h 25 min				
20 kS/s	8 d 16 h 20 min	4 d 08 h 10 min	2 d 04 h 05 min	1 d 2 h 02 min 30 s				
10 kS/s	17 d 08 h 40 min	8 d 16 h 20 min	4 d 08 h 10 min	2 d 04 h 05 min				
5 kS/s	34 d 17 h 20 min	17 d 08 h 40 min	8 d 16 h 20 min	4 d 08 h 10 min				
2 kS/s	86 d 19 h 20 min	43 d 09 h 40 min	21 d 16 h 50 min	10 d 20 h 25 min				
1 kS/s	173 d 14 h 40 min	86 d 19 h 20 min	43 d 09 h 40 min	21 d 16 h 50 min				
500 S/s	347 d 05 h 20 min	173 d 14 h 40 min	86 d 19 h 20 min	43 d 09 h 40 min				
200 S/s	ł	ì	217 d 00 h 20 min	108 d 12 h 10 min				
100 S/s			ł	217 d 00 h 20 min				


Saving data directly to your PC

Transfer measurement data directly to your PC by using the FTP sending function together with the real-time save function. This makes it easier to observe data after the measuring process.

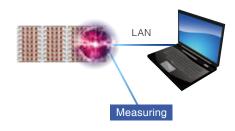

Long-term measurements for more efficient testing

The real-time save function boasts high-speed sampling and multi-channel measurements. Perform an approximately 1-hour measurement at 5 MS/s in 2 channels or 1 MS/s in 64 channels.

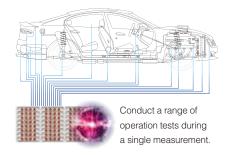

Complete Product Lineup



Install up to 27 modules

Build Your Ideal Inspection System

Choose from a diverse array of modules to build your perfect test system.

To test a ECU that requires multi-point, high-precision measurements, combine the U8975 and U8991 4-channel units to build a measurement system that delivers a maximum of 108 channels. In addition, create an integrated testing system that can simulate engine behaviors and sensors by utilizing the waveform generators, pulse generators, and VIR generators available on select units.

Use ANALOG UNIT 8966 and DIGITAL VOLTMETER UNIT MR8990 to supplement waveforms of high-speed and high-voltage signals, such as for inverter boards, in the same way as when measuring with a DMM. Combine high-precision units that perform simultaneous sampling for safe and reliable operation in a variety of measurement scenarios.

Unit interchangeability

Use any of the 18 types listed in the unit selection guide below.

The MR8740T is compatible with the same units used for the HIOKI MEMORY HICORDER MR8740, MR8741, MR6000, MR8827, and MR8847A.

Unit selection guide (18 types available)

	Measured signal	Model No.	Description	No. of channels	Fastest sampling	Bandwidth	A/D resolution	DC accuracy	Max. input voltage	Min. resolution (*1)	Max. sensitivity range	Isolated/ Non- isolated	Notes
	Voltage	8966	ANALOG UNIT	2 ch	20 MS/s	DC to 5 MHz	12 bits	±0.5% f.s.	400 V DC	0.05 mV	100 mV f.s.	Yes	n/a
	Voltage (multi-channel)	U8975	4ch ANALOG UNIT	4 ch	5 MS/s	DC to 2 MHz	16 bits	±0.1% f.s.	200 V DC	0.125 mV	4 V f.s.	Yes	n/a
NEW	Voltage (multi-channel, high resolution)	U8978	4CH ANALOG UNIT	4 ch	5 MS/s	DC to 2 MHz	16 bits	±0.3% f.s.	40 V DC	3.125 uV	100 mV f.s.	Yes	n/a
	Voltage (high resolution)	8968	HIGH RESOLUTION UNIT	2 ch	1 MS/s	DC to 100 kHz	16 bits	±0.3% f.s.	400 V DC	3.125 uV	100 mV f.s.	Yes	with AAF
	Voltage (DC, RMS)	8972	DC/RMS UNIT	2 ch	1 MS/s	DC to 400 kHz	12 bits	±0.5% f.s.	400 V DC	0.05 mV	100 mV f.s.	Yes	with RMS
	Voltage (high voltage)	U8974	HIGH VOLTAGE UNIT	2 ch	1 MS/s	DC to 100 kHz	16 bits	±0.25% f.s.	1000 V DC 700 V AC	0.125 mV	4 V f.s.	Yes	Maximum rated voltage to ground 600 V AC/DC CAT IV
	Voltage (high resolution)	MR8990	DIGITAL VOLTMETER UNIT	2 ch	2 ms	n/a	24 bits	±0.01% rdg. ±0.0025% f.s.	500 V DC	0.1 uV	100 mV f.s.	Yes	Maximum rated voltage to ground 300 V AC/DC CAT II
	Voltage (high resolution)	U8991	DIGITAL VOLTMETER UNIT	4 ch	20 ms	n/a	24 bits	±0.02% rdg. ±0.0025% f.s.	100 V DC	1 uV	1 V f.s.	Yes	Maximum rated voltage to ground 100 V AC/DC
	Current	8971	CURRENT UNIT	2 ch	1 MS/s	DC to 100 kHz	12 bits	±0.65% f.s.	Current sensor only		on current nsor	No	with RMS Max. 4 units
NEW	Current	U8977	3CH CURRENT UNIT	3 ch	5 MS/s	DC to 2 MHz	16 bits	±0.3% f.s.	Current sensor only		on current nsor	No	Max. 3 units
	Temperature	8967	TEMPERATURE UNIT	2 ch	1.2 ms	DC	16 bits	Detailed reference	Thermocouples only	0.01°C	200°C (392°F) f.s.	Yes	n/a
	Strain	U8969	STRAIN UNIT	2 ch	200 kS/s	DC to 20 kHz	16 bits	±0.5% f.s. ±4 με	Strain only	0.016 με	400 μ ε f.s.	Yes	n/a
	Frequency	8970	FREQ UNIT	2 ch	200 kS/s	DC to 100 kHz (*3)	16 bits	n/a	400 V DC	0.002 Hz	Depends on mode	Yes	n/a
NEW	Acceleration	U8979	Charge Unit	2 ch	200 kS/s	DC to 50 kHz (DC) 1 Hz to 50 kHz (AC)	16 bits	±0.5% f.s. (Voltage) ±2.0% f.s. (Acceleration)	40 V DC		nds on ion sensor	Yes	Supports TEDS
	Logic	8973	LOGIC UNIT	4 probes	n/a	n/a	n/a	n/a	n/a	n/a	n/a	No	9320-01,9327, Requires 9320-01, 9327 or MR9321-01

(*1) Minimum resolution shows the highest sensitivity resolution. (*2) When using the 9665 (*3) Minimum pulse width 2 μ s

Target	Model No.	Description	Channels	Output	Frequency	Output range
Voltage	MR8791	PULSE GENERATOR UNIT	8 ch	Pulse, pattern	0.1 Hz to 20 kHz (pulse) 10 Hz to 120 kHz (pattern clock)	Logic output (Amplitude: 0 to 5 V), Open collector output
Voltage	MR8790	WAVEFORM GENERATOR UNIT	4 ch	DC, sine wave	DC, 1 Hz to 20 kHz	Output: -10 V to 10 V (Amplitude setting range: 0 to 20 Vpp)
Voltage / Current / Resistance	U8794	VIR GENERATOR UNIT	8 ch	DC voltage, DC current, resistance (simulated output)	n/a	Voltage: -0.1 V to 5.3 V, Current: ± 5 mA, Resistance: 10 Ω to 1 M Ω

Unit Advantages

Ideal for simulation testing that involves signal generation and measurement







U8794 for generating voltage, current, and resistance

MR8790 for generating waveform signals


MR8791 for generating pulse signals

Generate voltage/current signals, pulses and simulated resistance

Use generator units in place of the sensor output for simulation testing or board testing lines using generated signals. Combine a generator unit and measurement unit to perform generation and measurement with a single test system.

VIR GENERATOR UNIT U8794

Output DC voltage, DC current, and resistance.

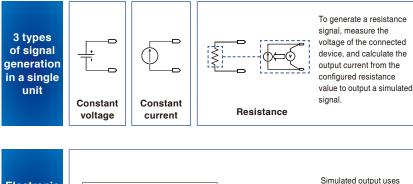



Electronic circuitry built with compact resistors



Traditional switching resistors are large and take up space.

8 channels with 1 unit

Easily configure output settings and monitor measured values

You can easily set the constant voltage, constant current, or resistance value to output for each channel. Internal voltage, current, and resistance values can be displayed on the same screen.

Ideal for testing that requires simulated signals

When used as an ECU testing device, generate simulated signals from various sensors, which is indispensable for testing electronic parts and maintaining equipment.

Generator units can simulate a variety of sensor signals

ECU type	Sensor function	Sensor type	Generator unit
	Air flow sensor	Voltage	U8794
	Throttle sensor	Voltage	U8794
	O2 sensor	Voltage	U8794
Engine	Knock sensor	Voltage	MR8790
management	Crank angle sensor	Voltage	MR8791
system	Camshaft sensor	Voltage	MR8791
	Water temperature sensor	Resistance	U8794
	Intake air temperature sensor	Resistance	U8794
Driving management system	Torque sensor G sensor Steering angle sensor Speed sensor	Voltage	MR8790 MR8791 U8794
Safety & comfort management system	Ultrasonic/radar sensor Vibration sensor Refrigerant pressure sensor Humidity sensor	Voltage Resistance	MR8790 MR8791 U8794



Testing electronic parts

Use the recorder's internal voltage monitor and current monitor to test electronic parts. Or, check resistance values and diode direction characteristics based on the output current and measured voltage.

Testing and maintaining equipment

Easily maintain and test equipment involved in voltage and current measurements thanks to high accuracy output.

Simultaneous sampling on all channels across all units




Measure up to 200 V U8975 Measure at 24-bit resolution U8991

Measure with high sensitivity at 100 mV f.s.: U8978

Ideal for measurements that require simultaneity

All channels are equipped with an A/D converter and measurement timings are synchronized, eliminating sampling time difference between units and channels. This delivers accurate time measurement for cursor readout and time difference measurements.

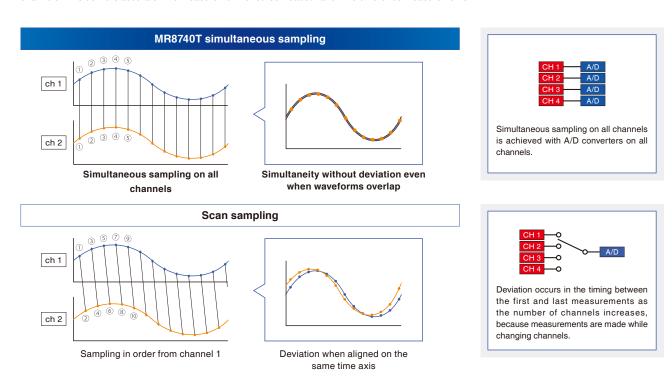


Record briefly at high speed, record for a long time at low speed

Use high-speed sampling to capture inverter waveforms, and low-speed sampling to measure RMS values on multiple channels.

Maximum recording time to internal memory

When using a	When using a	4-channel unit
2-channel unit	When using U8975, U8978	When using U8991
Recording length:	Recording length:	Recording length:
10 M points	5 M points	2 M points
0.5 s	0.25 s	0.1 s
1 s	0.5 s	0.2 s
2 s	1 s	0.4 s
5 s	2 s	1 s
10 s	5 s	2 s
20 s	10 s	4 s
50 s	25 s	10 s
1 m 40 s	50 s	20 s
3 m 20 s	1 m 40 s	40 s
8 m 20 s	4 m 10 s	1 m 40 s
16 m 40 s	8 m 20 s	3 m 20 s
33 m 20 s	16 m 40 s	6 m 40 s
1 h 23 m 20 s	41 m 40 s	16 m 40 s
2 h 46 m 40 s	1 h 23 m 20 s	33 m 20 s
5 h 33 m 20 s	2 h 46 m 40 s	1 h 6 m 40 s
13 h 53 m 20 s	6 h 56 m 40 s	2 h 46 m 40 s
1 d 3 h 46 m 40 s	13 h 53 m 20 s	5 h 33 m 20 s
2 d 7 h 33 m 20 s	1 d 3 h 46 m 40 s	11 h 6 m 40 s
5 d 18 h 53 m 20 s	2 d 21 h 26 m 40 s	1 d 3 h 46 m 40 s
11 d 13 h 46 m 40 s	5 d 18 h 53 m 20 s	2 d 7 h 33 m 20 s
23 d 3 h 33 m 20 s	11 d 13 h 46 m 40 s	4 d 15 h 6 m 40 s
57 d 20 h 53 m 20 s	28 d 22 h 26 m 40 s	11 d 13 h 46 m 40 s
115 d 17 h 46 m 40 s	57 d 20 h 53 m 20 s	23 d 3 h 33 m 20 s
	2-channel unit Recording length: 10 M points 0.5 s 1 s 2 s 5 s 10 s 20 s 50 s 1 m 40 s 3 m 20 s 16 m 40 s 33 m 20 s 1 h 23 m 20 s 2 h 46 m 40 s 5 h 33 m 20 s 1 d 3 h 46 m 40 s 2 d 7 h 33 m 20 s 5 d 18 h 53 m 20 s 11 d 3 h 46 m 40 s 2 d 7 h 33 m 20 s 5 d 18 h 53 m 20 s 11 d 13 h 46 m 40 s 5 d 18 h 53 m 20 s 11 d 13 h 46 m 40 s	2-channel unit When using U8975, U8978 Recording length: 10 M points Recording length: 5 M points 0.5 s 0.25 s 1 s 0.5 s 2 s 1 s 5 s 2 s 10 s 5 s 20 s 10 s 50 s 25 s 1 m 40 s 50 s 3 m 20 s 1 m 40 s 8 m 20 s 4 m 10 s 16 m 40 s 8 m 20 s 3 m 20 s 16 m 40 s 1 h 23 m 20 s 41 m 40 s 2 h 46 m 40 s 1 h 23 m 20 s 5 h 33 m 20 s 2 h 46 m 40 s 1 d 3 h 46 m 40 s 1 d 3 h 46 m 40 s 2 d 7 h 33 m 20 s 1 d 3h 46 m 40 s 5 d 18 h 53 m 20 s 2 d 21 h 26 m 40 s 23 d 3 h 33 m 20 s 11 d 13 h 46 m 40 s 57 d 20 h 53 m 20 s 28 d 22 h 26 m 40 s

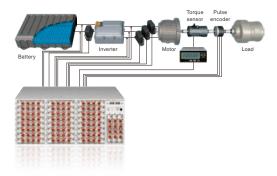

Instantaneous measurement of various inverter waveforms

Simultaneously measure and record multiple phenomena, such as the voltage, current, torque, and rotation signal on the primary and secondary sides of an inverter, from high voltage to minute voltage.


Highly accurate measurement of RMS values over long periods of time

Use the high-resolution CURRENT UNIT 8971 for highly accurate measurements of RMS values over long periods of time.

Measurement and Analysis Functions

Triggers that detect targeted events

Set triggers on any channel to record data whenever an event occurs. This setting can be configured for all channels.

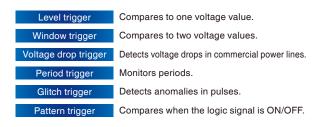


Setting multiple triggers for a single channel


Set up to 4 triggers for a single channel.

Sometimes the cause of issues are unclear, preventing you from setting up the proper trigger to capture the necessary waveforms and conduct further analysis. By being able to set glitch, level, windowin, and window-out triggers for the same input waveform, for instance, you can broaden the scope of your investigation and increase your chances of catching the signal anomalies.



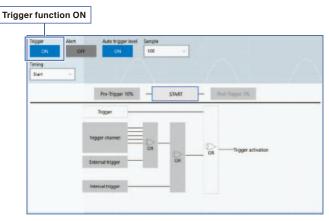

Setting Screen with Easy-to-Understand Trigger System Chart

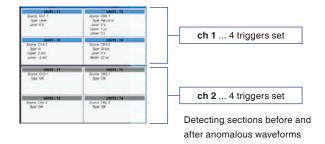

Warning function using trigger settings

Trigger settings are used to issue a warning if the setting range is exceeded.

For example, during an immunity test, this function can be used to notify the user when the variable limit value of the measured voltage is exceeded. In such cases, a window out trigger is used.


Output warning

- (1) When a waveform exceeds the upper and/or lower limits of the setting range, an event mark is displayed on the screen and an alarm sounds. When the waveform is once again within the upper and/or lower limits of the setting range, the alarm stops and an event mark is displayed on the screen.
- (2) In each case, the time, channel, type of trigger, and voltage measurement value are displayed on the top right side of the screen. * Effective for sampling at 100 KS/s or less.


When unsure about trigger level

Setting trigger level automatically

Take a preliminary measurement of a specified number of samples before the actual measurement, and use the average of those values to set the trigger level. This function is useful both for the warning function and for normal triggers.

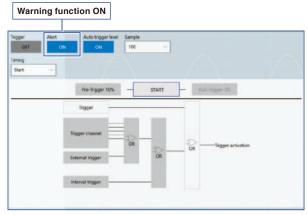

Warning function settings are the same as for triggers, and easy to use.

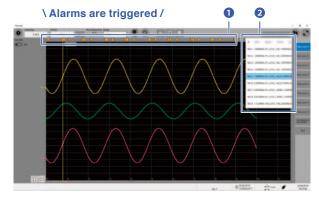


Warning displayed at the top of the screen when the alarm sounds

Calculation function with high analytical performance

Waveform processing

In addition to calculating numerical values such as average values and RMS values, up to 16 types of simultaneous processing are available by combining calculations in the waveform dimension with differential arithmetic, including the four arithmetic operations, between channels.

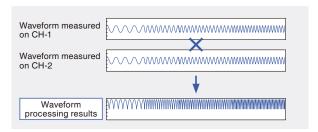

Simultaneously make up to 16 waveform calculations by combining the four arithmetic operations and 11 types of calculations

Four arithmetic operations (addition, subtraction, multiplication, and division)	Parallel displacement along time axis (SLI)
Absolute value (ABS)	Differentiation (primary (DIF), secondary (DIF2))
Exponentiation (EXP)	Integration (primary (INT), secondary (INT2))
Common logarithm (LOG)	Trigonometric functions (SIN, COS, TAN)
Square root (SQR), cube root (CBR)	Reverse trigonometric functions (ASIN, ACOS, ATAN, ATAN2)
Moving average (MOV)	MR8990 DIGITAL VOLTMETER UNIT time shift for PLC delay (PLCS)

Numerical calculations

The measured waveforms are analyzed with numerical parameters.

The MR8740T features several new numerical calculations including overshoot and undershoot calculations.

In addition to analog and logic channels, the recorder performs calculations on waveform processing results. It also features a numerical judgment function.

Simultaneous numerical calculations of up to 16 out of a total of 33 computations

Average value	Duty ratio
RMS value	Pulse count
Peak to peak value	Four arithmetic operations
Maximum value	Time difference
Time to maximum value	Phase difference
Minimum value	High-level
Time to minimum value	Low-level
Period	Median value
Frequency	Amplitude
Rise time	Overshoot
Fall time	Undershoot
Standard deviation	+Width
Area value	-Width
X-Y area value	Burst width
Specified level time	Integration values
Specified time level	XY waveform angle
Pulse width	

Find a specific waveform within large amounts of measurement data

Set the peak values or trigger conditions you want to search for to have the relevant data retrieved and displayed automatically.


Our new Memory HiCorder HiConcierge function automatically calculates the characteristics of the reference waveform you have set and searches all of the measured data to detect any waveforms with low similarity as anomalous waveforms.

This drastically reduces the amount of time required to search for anomalies by eliminating the need to scroll through measured waveforms and checking them visually.


Auto search of anomalous waveforms with Concierge

Memory HiCorder Concierge

A new waveform search function that finds anomalous waveforms in all of the measured data. This function is ideal for situations where it is difficult to set the right triggers before measuring because the nature of potential anomalies cannot be predicted.

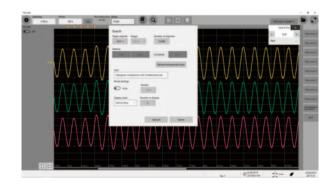

 ${\it Memory \ HiCorder \ Concierge \ Waveform \ Search \ Screen}$



Rich set of search methods

Peak search

Search for the maximum value, minimum value, local maxima, or local minima in all of the measured data, and mark the search point in the waveform.

Trigger search

Set trigger conditions for all of the measured data again to search for points where the conditions are fulfilled, even if no triggers were set during the measuring process.

Jump

Jump to an event mark you made while measuring, to the cursor position on the display, or to the location measured at a specified time.

Smart Links with Monitors and PCs






Easily check measured waveforms and the settings of communication commands

When building a testing system, use a monitor to easily evaluate captured waveforms in full detail and review the settings for the communication commands sent from a PC. After the system is built, detach the monitor to maximize the use of resources in other applications, while continuing to control the MR8740T with only the PC. Or, if control is not necessary, use only the MR8740T with a monitor to take measurements and observe waveforms in standalone mode.

* A display with a resolution of 1920 x 1080 or better is recommended.

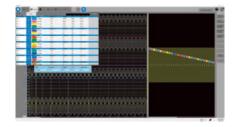


Display system for efficient work

Configure various settings while viewing a variety of information on a single screen. Improve work efficiency by reducing the need to switch or scroll through screens in order to check the settings for each channel.



Waveform analysis with 8 cursors

When building a system or analyzing faulty parts, perform a detailed check of waveforms in order to verify proper operation. Use multiple cursors on the MR8740T to smoothly analyze and evaluate actual waveforms.

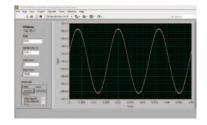

LabView compatibility

NEW

The MR8740T can be controlled with LabVIEW. Search for "MR8740-50" under "Download Software" in the "Support" section of Hioki's website and download the LabVIEW driver



Control the MR8740T with a single computer

Connect the MR8740T to a computer via LAN in order to control it with communication commands. This allows you to configure, generate, measure, and acquire data with only a single computer. After the testing system is built, remove the monitor for a more compact system.



Standard recorder when control via PC is not required

If the unit will be used only as a basic recorder and there is no need to use a computer for control, use only the MR8740T together with a monitor to take and record measurements. Display the channel waveforms that are measured with the MR8740T on the monitor in order to quickly analyze and calculate results.

High-speed communication function

A 1000 BASE-TX LAN terminal is equipped as standard.


FTP server function


The content of the MR8740T's memory (USB memory and internal SSD) can be copied to the computer.

FTP transfer function

Measurement data can be transferred directly to the computer.

Interface

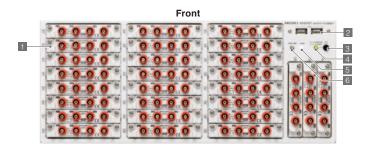

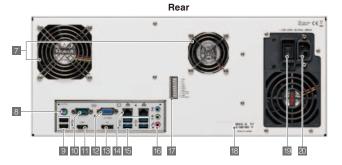

LEDs indicate unit status

The POWER STANDBY lamp and DIAG lamp indicate the basic status. The CMD ERR lamp lights when an error or warning occurs.

LED name	Color/ flashing	Meaning when on	How to turn off
	Orange	Power standby	Main power switch OFF
POWER STANDBY	Green	Power ON	Activate switch OFF *
STANDET	Green/ flashing	Power ON (warming up)	Activate switch OFF *
DIAG	See below		-
CMD ERR	Red	Syntax error in command received, or warning occurred	*Goes off with CLS

* If the POWER STANDBY lamp is steady or flashing green, do not turn the main power switch OFF.

DIAG LED Mode Table

Display order of priority	Color/ flashing	Status	Supplement
1	Red	Ambient temperature too high (environmental temperature > 35°C/95°F)	
2	Purple	Ambient temperature too low (environmental temperature < 10°C/50°F)	
3	O Yellow	CPU load factor 80% or more	The average load factor is updated every 0.5 seconds.
	Blue	The instrument is in the trigger standby state.	
4	Green	Recording in progress	
	Pink	Recording finished	New command received, switches to normal display.
5	O White	Normal operation in progress (stopped)	

Internal battery

The MR8740T is equipped with a battery (sealed lead acid battery) for shutting down the Windows operating system when the power supply is cut off. This allows the unit to be shut down normally even when there is an unexpected power failure or a breaker trips.

Using the battery to shut down normally if there is a power failure



- Breaker OFF - Power outage (for 150 ms or longer)

- Power cord disconnected



20 2000 2000

* If the main power switch is switched off while the recorder is in operation, the internal battery will not turn on, preventing the recorder from shutting down normally. Before turning the main power off, be sure to first put the recorder in standby



* The internal battery should be replaced regularly, according to the estimated service life indicated in the table above. If the service life is exceeded and a power outage occurs, Windows might not shut down normally, and if so Windows might not start up again normally. Therefore, it is important to replace the battery on a regular basis. At the recommend replacement time, please contact your authorized Hioki distributor or reseller for a replacement battery.

1 Space for units

Max. 27 units can be installed Model 8973 can only be installed in slots 25 to 27

2 USB 2.0 connector x2

For connecting a USB memory stick, USB mouse, or USB keyboard

3 Activate button

ctivates the unit, or places it in standby

4 POWER lamp Indicates the unit is activated or in standby

5 DIAG light

6 Command error lamp

ights when a command error occurs

7 Air vents

For reducing the internal temperature

8 PS2 connector

Not operational with this system

9 USB 2.0 connector x2 For connecting a USB memory stick, USB mouse, or USB keyboard

10 COM terminal

Not operational with this system

11 HDMI terminal

For connecting to monitors using an HDMI cable Max. resolution: 3840 x 1260

12 VGA terminal

For connecting to monitors using an RGB cable Max. resolution: 2560 x 1600

13 Display Port terminal

For connecting to monitors using a Display Port cable Max. resolution: 4096 x 2160

14 1000 BASE-T connector

For connecting to the network via a LAN cable

15 USB 3.0 connector x4

For connecting a USB memory stick, USB mouse, or USB keyboard

16 Audio terminals

Not operational with this systen

17 External control terminals

For inputting various external signals to control the device

18 Model No., Serial No.

Numbers for identifying the unit

19 Main power switch

For turning the power ON or OFF

* Place the unit in standby before turning the power OFF

20 Power inlet

Connect the included power cord

External control terminals

Connect an external device to the external control terminal in order to use that external device to start and stop the measurements made by the unit.


No.	Term
1	
2	
3	
4	
5	
6	
7	
8	Е
9	TF
10	
11	E


	No.	Terminal name	Operation
	1	GND	-
	2	IN1	Start/stop measurements, save,
	3	IN2	forced termination, event input
	4	GND	-
	5	OUT1	Judgment output, occurrence of errors,
	6	OUT2	busy, trigger standby
	7	GND	-
	8	EXT.TRIG	Inputs signal as an external trigger source
	9	TRIG.OUT	Outputs a signal when triggering occurs
	10	GND	-
	11	EXT.SMPL	Inputs external sampling signals

Analysis software

Wave Viewer Wv (Bundled software) Download free updates from the HIOKI website.

The MR8740T ships standard with Wave Viewer Wv, an application for displaying and converting waveforms. The application allows you to review waveforms stored in binary data captured with the MR8740T on a PC and convert files to CSV format so that they can be loaded by Excel.





Sample Wy Screen

Sample Excel Screen

• Wave Viewer (Wv) Brief Specifications

	` '
Operating environment	Windows 10 / 8 / 7 (32 / 64-bit)
Functions	Simple display of waveform files Convert binary data files to text format, CSV, etc. Scroll function, enlarge/reduce display, jump to cursor/trigger position, etc.

WAVE PROCESSOR 9335 (Software sold separately)

Waveform display, calculation, and printing functionality

0225 Briof Specifications

• 9000 DI		
Operating environment	Windows 10 / 8 / 7 (32 / 64-bit)	in many by built
Functions	Display functions: Waveform display, X-Y display, Cursor function, etc. File loading: Readable data formats (MEM, .REC, .RMS, .POW) / Maximum load able file size: Maximum file size that can be saved by a given device (file size mis be limited depending on the computer configuration) Data conversion: Conversion to CSV format, Batch conversion of multiple files, e	
Printing	- Print function: Printing image file output (expanded META - Print formatting: 1 up. 2-to-16 up. 2-to-16 rows, X-Y 1-to-4 up.	

Product Specifications

Basic specification Recording method	Memory Record		
No. of Channels	With ANALOG UNIT 8966 installed: Up to 54 analog channels With LOGIC UNIT 8973 inserted: Up to 48 analog channels + 48 logic channels With ANALOG UNIT U8975 / U8978 / U8991 installed: Up to 108 analog channels With LOGIC UNIT 8973 inserted: Up to 96 analog channels + 48 logic channels *Logic units are limited to slots 25 to 27 only.		
Maximum sampling		nited to slots 25 to 27 only. ALOG UNIT 8966, all channels at the same time)	
rate	External samplin		
Memory capacity	1 G words	rding length per channel by limiting the number of modules in use.	
	27 modules: Usin modules: using m	g all modules; 16 modules: using modules 1 through 16; 8 nodules 1 through 8; 4 modules: using modules 1 through 4	
Modules	16 modi		
Operating		ill be disabled for modules other than those shown above.	
environment	Indoors, Pollution	n Degree 2, altitude up to 2000 m (6562.20 ft)	
Operating temperature and humidity range Storage temperature		F to 104°F), less than 80% RH (no condensation) 4°F to 122°F), 80% RH or less (no condensation)	
and humidity range Compliance	Safety: EN 61010		
standards	EMC EN 61326-		
Dielectric withstand voltage	1620 V AC 1 min	ute (sensed current: 10 mA) between main unit and power supply	
Power supply	supply voltage)	age: 100 V to 240 V AC (consider ±10% voltage fluctuations for rated oly frequency: 50 Hz/60 Hz, Expected transient overvoltage: 2500 V	
Maximum rated power consumption	400 VA	sy noquency: 50 - 12,50 - 12, Expected that block 515 (15) and	
Clock	Auto-calendar, le	eap-year correcting 24-hour clock	
Backup battery life		s (at 23°C (73°F)) for clock and settings	
Battery service life	when discharge		
Dimensions		$(16.77 \text{ in } \pm 0.08 \text{ in}) \text{ W} \times 177 \text{ mm} \pm 2 \text{ mm} (6.97 \text{ in } \pm 0.08 \text{ in}) \text{ H} \times 505 \pm 0.08 \text{ in}) \text{ D} (excluding protrusions)$	
Mass	14.0 kg ±0.5 kg (493.8 oz ±17.6 oz) (main unit only)	
Product warranty period	1 year	733.7 oz ±35.3 oz) (with ANALOG UNIT 8966 installed)	
Accessories	Power cord, Quicl	k Start Manual (booklet), Instruction Manual (detailed edition) (CD-R CD-R), blank panel (blank slot only), rack installation hardware	
Accuracy	application disk (c	55-11), biank paner (biank siot only), rack installation maruware	
Accuracy guarantee conditions	Temperature and	humidity range: 23°C ±5°C (73°F ±9°F), 80% RH or less	
Time axis accuracy	±0.001%		
Clock precision	±0.001%		
System (ATX mot) CPU		a product with similar specifications	
Main memory	DDR48GB		
OS	Windows 10		
Startup disk LAN interface	SSD 120 GB		
Compatibility	IEEE 802 3 Ether	rnet 1000BASE-T, 100BASE-TX, 10BASE-T	
specifications Number of ports	2	THE TOOLS OF IT, TOOLS OF IT, TOOLS OF IT	
Functions	DHCP, DNS, FTF	P, HTTP	
Connector	RJ-45		
USB interface Compatibility			
specifications	USB 3.0 complia	ant x 4, USB 2.0 compliant x 4	
Connected devices Connector		e, USB memory stick	
Monitor output	Series A recepta		
	VGA	Resolution: 2560 x 1600 dots (Max.)	
Output type	HDMI Display Port	Resolution: 3840 x 2160 dots (Max.) Resolution: 4096 x 2304 dots (Max.)	
External I/O town		resolution: 1920 x 1080 dots or better	
External I/O termi Terminal block	Push-button type	• • • • • • • • • • • • • • • • • • •	
	Maximum input	+10 V DC	
	Input voltage	2.5 V to 10 V for high level, 0 V to 0.8 V for low level	
External input	Response pulse width	50 ms or more during high periods, 50 ms or more during low periods	
External input	Pulse interval	200 ms or greater	
	Number of terminals	2	
	Functions	START, STOP, START/STOP, SAVE, ABORT, event	
	Output type Output voltage	Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level	
	Maximum input	50 V DC, 50 mA, 200 mW	
External output	voltage Number of	2	
	terminals	Judgment (PASS), judgment (FAIL), occurrence of errors,	
	Functions	Judgment (PASS), Judgment (FAIL), occurrence of errors, busy, trigger standby	
	Maximum input voltage	+10 V DC	
	External trigger	ON/OFF	
	filter	External trigger filter OFF: 1 ms or more during high periods,	
External trigger	Response pulse width	2 us or more during low periods Trigger filter ON : 2.5 ms or more during low periods 2.5 ms or more during low periods	
		Rising/falling selection possible Rising: Triggering occurs when the voltage rises from low	

	Output type	Open drain output (active law, with 5 \/ veltage output)	
	Output type Output voltage	Open drain output (active low, with 5 V voltage output) 4.0 V to 5.0 V for high level, 0 V to 0.5 V for low level	
Trigger output	Maximum input	50 V DC, 50 mA, 200 mW	
mgger output	Voltage Output pulse	Level or pulse selection possible	
	width	Level: Sampling period x data number after trigger Pulse: 2 ms ±1 ms	
	Maximum input	+10 V DC	
	voltage Input voltage	2.5 V to 10 V for high level, 0 V to 0.8 V for low level	
External sampling	Response	50 ns or more during high periods, 50 ns or more during low	
, 0	pulse width Maximum input	periods 10 MHz	
	frequency Functions	External sampling clock input, rising/falling selection possible	
Trigger	runctions	External sampling clock input, hairig/railing selection possible	
Trigger type	Digital comparis		
Trigger conditions	AND or OR cond Analog, logic	dition for trigger sources and interval trigger	
	Max. 108 chann	els riggers can be set for each analog channel.	
Trigger source	Up to 4 logic trig	gers can be set for each logic probe.	
	External trigger	ction is activated if all trigger sources are turned off.	
	Level trigger	Triggering occurs when the set level rises (falls). Triggering occurs when peak voltage drops below the set level	
	Voltage drop trigger	(For a 50 Hz / 60 Hz commercial power supply only).	
		* Not available with MR8990, U8991, or 8970 Triggering occurs when leaving (OUT) or entering (IN) the	
	Window trigger	trigger level upper limit and lower limit setting areas.	
		Sets the period reference value and cycle range. Triggering occurs when the rising (falling) reference value	
Analog triggers	Period trigger	period is measured and determined to be outside or within the cycle range.	
Analog Inggers		* Not available with MR8990, U8991, or 8970	
	Glitch trigger	Sets the reference value and pulse width (glitch width). Triggering occurs if the value is below the set pulse width from	
	Gillori triggor	rising or falling of the reference value. * Not available with MR8990 or U8991	
		Specifying events (1 to 4000) Counts the number of times conditions were fulfilled for each	
	Specifying events	trigger source. Triggering occurs when the set number of	
		times is reached. * Not available when the trigger conditions are set to AND	
Logic trigger	Pattern trigger u	sing 1, 0, or x le triggering can be prioritized over all trigger sources.)	
Forcible trigger	Recording poss	ible at specified measuring intervals (hours, minutes, or seconds)	
Interval trigger		ditions are fulfilled when the measuring process starts. Irigger conditions are met at the set measuring intervals.	
Trigger filter		100, 150, 200, 250, 500, 1000, 2000, 5000, 10,000 samples	
Level setting resolution	1 LSB (12/16-bit	unit)	
Pre-trigger		value set in 1% steps available), ecording time for pre-trigger	
Trigger timing	START	cording time for pre-trigger	
	Incompatible with	th trigger function (Only analog trigger function can be enabled.) ons are met : Channel numbers and measured values	
Warning function		are displayed/saved, an event mark is	
warning function	displayed, and an alarm sounds. If trigger conditions are no longer met: Channel numbers and measured values		
		are displayed/saved, an event mark is displayed, and the alarm stops.	
		function, warning function) nples are taken, and the average value is set as the criteria for	
Auto trigger level	the window out t	rigger.	
Waveform screen		oles: Select from 100, 200, 300, 400, and 500	
	Waveform display in	1 screen, 2 screens, 4 screens, 8 screens, 16 screens	
Display format	chronological	* Displays up to 64 channels per sheet. * Multiple sheets can be set for the same channel.	
Observation at the second	order Max. 16 sheets		
Sheet function	1 /	at can be selected for each sheet.	
Zoom display		displayed in chronological order in the top part of the waveform	
Full screen display			
		s the zoomed waveforms are displayed in the bottom part. rms over the entire waveform screen.	
	Displays wavefo Waveform		
	Displays wavefo	rms over the entire waveform screen.	
	Displays waveform color Interpolation Variable	rms over the entire waveform screen. Fixed colors (32 colors)	
Wayeform display	Displays waveform color Interpolation Variable display	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform	
Waveform display	Displays wavefor Waveform color Interpolation Variable display Vernier	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input)	
Waveform display	Displays waveform color Interpolation Variable display Vernier Grid Logic display	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF/ON	
Waveform display	Displays wavefor Waveform color Interpolation Variable display Vernier Grid	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow	
	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973	
Enlarge / Reduce	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can be	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 be adjusted as necessary.	
Enlarge / Reduce Waveform scrolling	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can It Scroll left or righ Always displays	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF/ON Wide, Standard, Narrow Displays waveforms upside down. *Not available with 8967, 8970, or 8973 be adjusted as necessary. to by with mouse clicks and scroll back while measuring. the latest data by following the measuring process.	
Enlarge / Reduce	Displays wavefor Waveform color Uraveform Color Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can it Scroll left or righ Always displays The drawing sta	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. *Not available with 8967, 8970, or 8973 be adjusted as necessary. t by with mouse clicks and scroll back while measuring.	
Enlarge / Reduce Waveform scrolling Roll display Level monitor	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can la Scroll left or righ Always displays The drawing sta The roll cannot to Numerical	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 be adjusted as necessary. tby with mouse clicks and scroll back while measuring. the latest data by following the measuring process. tt position (left or right edge) can be selected.	
Enlarge / Reduce Waveform scrolling Roll display	Displays wavefor Waveform color Uarieoler Uarieoler Grid Logic display Wernier Grid Logic display Width Waveform inversion Zoom ratio can t Scroll lieft or righ Always displays The drawing sta The roll cannot t Numerical display	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 pe adjusted as necessary. tby with mouse clicks and scroll back while measuring. the latest data by following the measuring process. rt position (left or right edge) can be selected. pe displayed when the overlay function is turned on. Up to 8 cursors can be displayed.	
Enlarge / Reduce Waveform scrolling Roll display Level monitor	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can la Scroll left or righ Always displays The drawing sta The roll cannot to Numerical	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 be adjusted as necessary. t by with mouse clicks and scroll back while measuring. the latest data by following the measuring process. rt position (left or right edge) can be selected. be displayed when the overlay function is turned on.	
Enlarge / Reduce Waveform scrolling Roll display Level monitor	Displays wavefor Waveform color Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can t Scroll left or righ Always displays The drawing sta The roll cannot t Numerical display Tracing cursor	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. * Not available with 8967, 8970, or 8973 De adjusted as necessary. tby with mouse clicks and scroll back while measuring. The latest data by following the measuring process. It position (left or right edge) can be selected. De displayed when the overlay function is turned on. Up to 8 cursors can be displayed. *Displays potential, time from trigger, time difference between cursors, and potential difference. Up to 8 cursors can be displayed.	
Enlarge / Reduce Waveform scrolling Roll display Level monitor function	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display width Waveform inversion Zoom ratio can It Scroll left or righ Always displays The drawing sta The roll cannot Numerical display	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. *Not available with 8967, 8970, or 8973 be adjusted as necessary. t by with mouse clicks and scroll back while measuring. the latest data by following the measuring process. rt position (left or right edge) can be selected. be displayed when the overlay function is turned on. Up to 8 cursors can be displayed. *Displays potential, time from trigger, time difference between cursors, and potential difference.	
Enlarge / Reduce Waveform scrolling Roll display Level monitor function	Displays wavefor Waveform color Interpolation Variable display Vernier Grid Logic display Waveform inversion Zoom ratio can t Scroll left or righ Always displays The drawing sta The roll cannot Numerical display Tracing cursor Horizontal cursor Gauge Jump	rms over the entire waveform screen. Fixed colors (32 colors) Linear Always ON Adjustable input waveform (Adjustment range: 50% to 200% of the input) OFF / ON Wide, Standard, Narrow Displays waveforms upside down. *Not available with 8967, 8970, or 8973 be adjusted as necessary. tby with mouse clicks and scroll back while measuring. the latest data by following the measuring process. rt position (left or right edge) can be selected. be displayed when the overlay function is turned on. Up to 8 cursors can be displayed. *Displays potential, time from trigger, time difference between cursors, and potential difference. Up to 8 cursors can be displayed. *Displays potential and potential difference.	

Setting screen		20 M, 10 M, 5 M, 2 M, 1 M, 500 k, 200 k, 100 k, 50 k, 20 k, 10 k, 5	
	Real-time sampling	k, 2 k, 1 k, 500, 200, 100, 50, 20, 10, 5, 2, 1 [S/s] External sampling: Max. 10 MHz depending on external sampling	
	Sampling	terminal input signal	
Sampling speed	With real-time	Maximum configurable sampling speed [Using internal SSD as save destination] 5 MS/s (up to 12 channels), 2 MS/s (13 to 32 channels), 1 MS/s (33 to 64 channels), 500 kS/s (65 or more channels) [Using USB Drive Z4006 as save destination]	
	saving enabled *: Values in parentheses indicate number of channels	1 MS/s (up to 12 channels), 500 kS/s (13 to 24 channels), 200 kS/S (25 to 64 channels), 100 kS/s (65 or more channels) [Using FTP transmission as save destination] 200 kS/s (up to 12 channels), 100 kS/s (13 to 24 channels), 50 kS/s (25 to 64 channels), 20 kS/s (65 or more channels) "USB memory stick performance is guaranteed only when	
		connected via USB 3.0 connector. *Double all channel counts if the U8991 is installed.	
Maximum recording length	Real-time sampling	[Fixed recording lengths] When using 27 modules: 2 M (with U8991), 5 M (with U8975, MR8990), 10 M (S4 channels) [points] When using 16 modules: 5 M (with U8991), 10 M (with U8975, MR8990), 20 M (32 channels) [points] When using 16 modules: 5 M (with U8991), 20 M (with U8975, MR8990), 20 M (32 channels) [points] When using 4 modules: 20 M (with U8991), 50 M (with U8975, MR8990), 100 M (8 channels) [points] User-specified recording lengths] User-specified recording lengths] When using 27 modules: 4194300 (with U8991), 8388600 (with U8975, MR8990), 16777200 (54 channels) [points] When using 16 modules: 8388600 (with U8991), 16777200 (with U8995), MR8990), 33554400 (32 channels) [points]	
		When using 8 modules: 16777200 (with U8991), 33554400 (with U8975, MR8990), 67108800 (16 channels) [points] When using 4 modules: 33554400 (with U8991), 67108800 (with U8975, MR8990), 134217600 (8 channels) [points] *User-configurable in units of 100 points.	
	With real-time Determined by space available on save destination, file system, saving enabled and number of measurement channels		
Repeat measurement	Single measurem *The repeat and u	nent, repeat measurement, user-specified count user-specified count settings are not available when real-time saving	
		and offset, 2-point input, Model, Output rate, dB, Rating	
Scaling	* Automatic detec	model to configure the scaling settings automatically. tion and automatic scaling are available when a current unit is used. channel comments	
Comments		rs and channel comments are added on the setting screen and	
Help	Displays the inst	truction manual	
Saving	SSD	Internal SSD (480 GB)	
	USB MEMORY STICK	Z4006 (16 GB)	
Save destination	Sending to FTP	PC with a LAN connection	
	Sending by email Send file to specified email address		
File format	FAT, FAT32, NTFS, exFAT		
	Alphanumeric and Japanese input		
Filename Processing identical	-		
Processing identical filenames	Adding a serial r	number at the beginning before saving (Date and time added after	
Processing identical	Adding a serial in the file when transition ON / OFF * Automatically same as uring procing the series of the seri	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess.	
Processing identical filenames	Adding a serial rithe file when trans ON / OFF * Automatically se measuring proc * Settings files are * If a memory divi while data is bei Deletes the files free space left o	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. e not supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination.	
Processing identical filenames Auto saving	Adding a serial in the file when transition of the file when transition of the file when transition of the file with the file wi	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. e not supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination.	
Processing identical filenames Auto saving	Adding a serial in the file when trans ON / OFF * Automatically semeasuring processed in the file series are if a memory divident of the file series are in the file series pace left of a file series pace left of series file series	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination.	
Processing identical filenames Auto saving Deleting and saving	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are 'if a memory divi while data is bei Deletes the files free space left o Enabled for auto Settings data Measurement data Index	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. not supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. b saving SET	
Processing identical filenames Auto saving	Adding a serial the file when trans ON / OFF ON / OFF Automatically se measuring processes assuring processes assuring processes of the among diving files are free space left or Enabled for automatical series of the space of t	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. a not supported. sion is set, it is possible for measurement of the next block to starting saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. s aving .SET Binary format (MEM), text format (CSV) Divided saving (JDX) .BMP, .PNG, .JPG	
Processing identical filenames Auto saving Deleting and saving	Adding a serial the file when trans ON / OFF * Automatically se measuring proc * Settings files are * If a memory divi while data is beit Deletes the files free space left o * Enabled for autu- Settings data Measurement data Measurement data Displayed images Numerical calculation results calculation results	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. a not supported. sion is set, it is possible for measurement of the next block to starting saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. SET Binary format (MEM), text format (CSV) Divided saving (IDX) .BMP, .PNG, .JPG .CSV	
Processing identical filenames Auto saving Deleting and saving Types of saved data	Adding a serial the file when trans ON / OFF * Automatically semeasuring proc * Settings files are * If a memory divi while data is beit Deletes the files free space left outs * Enabled for automatical the files free space left outs * Enabled for automatical the files free space left outs * Enabled for automatical the files free space left outs * Enabled for automatical files * E	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. 3 saving SET Binary format (MEM), text format (CSV) Divided saving (IDX) .BMP, PNG, JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels	Adding a serial the file when trans ON / OFF * Automatically se measuring proc * Settings files are * If a memory divi while data is bele Deletes the files free space left o * Enabled for auto- Settings data Measurement data Measurement data Displayed images Numerical calculation results Startup Setlect a channe when sawing me	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. SET Binary format (MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data.	
Processing identical filenames Auto saving Deleting and saving Types of saved data	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory divi while data is bei Deletes the files free space left or Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement drom 2 to 1000) to Measurement Measurem	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no not the specified media at the save destination. saving .SET Binary format (MEM), text format (CSV) Divided saving (IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels reasurement data. ata (text format) is culled according to the specified culling value perfore saving.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are * If a memory divi while data is bei Deletes the files free space left or * Enabled for autor Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement data Index	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. son is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no n the specified media at the save destination. o saving .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels beasurement data. ata (text format) is culled according to the specified culling value before saving.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory divi while data is bei Deletes the files free space left or Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement drom 2 to 1000) to Measurement Measurem	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no not the specified media at the save destination. saving .SET Binary format (MEM), text format (CSV) Divided saving (IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels reasurement data. ata (text format) is culled according to the specified culling value perfore saving.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving	Adding a serial the file when trans ON / OFF * Automatically se measuring proc * Settings files are * If a memory divi while data is bei Deletes the files free space left to Enabled for aut Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement difford 2 to 1000 bt Types of saved Binary format	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. saving SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels become at the control of the specified culling value perfore saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 16 MB of data, Every 32 MB of data, Every 1,000,000 points of data, Every 1,000,000 points of data	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory divi while data is bei Deletes the files free space left or Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement (from 2 to 1000) to Types of saved Binary format Text format Numerical calculation Text format Numerical	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no n the specified media at the save destination. saving .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels seasurement data. ata text format is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data DIVISION TO THE STAND TO	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory divi while data is bei Deletes the files free space left to Enabled for aut Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement difford 2 to 1000) to Types of saved Binary format Text format Numerical calc results New files or exis * Enabled when r	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. average of the saving of the save destination. Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, PNG, JPG CSV STARTUP.SET If from all the channels available or from the displayed channels become as a text format) is culled according to the specified culling value perfore saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 16 MB of data, Every 32 MB of data, Every 1,000,000 points of data. OFF, Every 4,000,000 points of data. OFF, By the calculation number ting files numerical calculation results are saved. to create a new file or add data to an existing file when starting to	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory div while data is bei Deletes the files free space left to Enabled for aut Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement differ Types of saved Binary format Text format Numerical calculation Types of saved Binary format Numerical calculation Text format Numerical calculation Numerical Numerical Numerical Numerical Numerical Numerical Nume	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. average of the save destination. Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, PNG, JPG CSV STARTUP.SET If from all the channels available or from the displayed channels beautrement data. ata (text format) is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 16,000 points of data. Every 1,000,000 points of data OFF, By the calculation number ting files umerical calculation results are saved. to create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "if a memory divi while data is bei Deletes the files free space left or Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement diffom 2 to 1000 by Types of saved Binary format Text format Numerical calculation Text format Numerical calculation Select whether Select whether Text Select whether Text Select whether Text such Select whether Text such Select whether Text Select whether Text Select whether Text Text Select whether Text Text Select whether Text Text Select whether Text Text	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. average aves the saved. with the oldest creation dates and saves data when there is no not be specified media at the save destination. 3 awing SET Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, .PNG, .JPG CSV STARTUP.SET and the channels available or from the displayed channels beauerment data. at text format is culled according to the specified culling value before saving. data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 16 MB of data OFF, Every 10,000,000 points of data Every 1,000,000 points of data CYF, By the calculation number Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data	Adding a serial the file when trans ON / OFF * Automatically semeasuring proc Settings files are If a memory divi while data is bei Deletes the files free space left or * Enabled for autor Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement data Interest Instant saving New files or exis * Enabled when re * Select when re	number at the beginning before saving (Date and time added after sferred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. average of the save destination. Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, PNG, JPG CSV STARTUP.SET If from all the channels available or from the displayed channels beautrement data. ata (text format) is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 16,000 points of data. Every 1,000,000 points of data OFF, By the calculation number ting files umerical calculation results are saved. to create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "if a memory divi while data is bei Deletes the files free space left or Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement (from 2 to 1000) to Types of saved Binary format Text format Numerical calculation Select whether measure. Instant saving Saving range	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no n the specified media at the save destination. saving .SET Binary format (MEM), text format (CSV) Divided saving (IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels assurement data. ata (text format) is culled according to the specified culling value before saving. Id data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 1,000,000 points of data CFF, Every 60,000 points of data OFF, By the calculation number sting files unumerical calculation results are saved. to create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are * If a memory divi while data is bei Deletes the files free space left or * Enabled for auto- Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement divided Text format Numerical calculation Text format Numerical calculation Numerical calculation Select a channe when saving me Measurement data Neasurement in Select when Select space Select Select Settings SSD USB MEMORY STICK Settings data	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no not supported media at the save destination. saving SET Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, PNG, JPG CSV STARTUPSET If from all the channels available or from the displayed channels beasurement data. ata text format) is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 1,000,000 points of data Every 1,000,000 points of data OFF, By the calculation number sting files income and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory divi while data is bei Deletes the files free space left or Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement data Index Instant Index Instant Index Instant Instant Instant saving Saving range SSD USB MEMORY STICK Settings data Measurement data Index Instant saving Instant saving Instant Instant Index Index Instant Index I	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no not the specified media at the save destination. saving SET Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, PNG, JPG CSV STARTUP.SET Informal the channels available or from the displayed channels assurement data. ata text format is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 1,000,000 points of data OFF, By the calculation number sting files numerical calculation results are saved. or create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (.MEM), text format (.CSV)	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded	Adding a serial the file when trans ON / OFF * Automatically se measuring proc * Settings files are * If a memory divi while data is bei Deletes the files free space left to Enabled for aut Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement difford 2 to 1000) £ Types of saved Binary format Text format Numerical calcresults New files or exis Enabled when r Select whether t measure. Instant saving Saving range SSD USB MEMORY STICK Settlings data Measurement divided Measurement Select whether t measure. Instant saving Select whether t measure. Select Settlings data Measurement Measurement Select Selectings Sele	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. and supported. sion is set, it is possible for measurement of the next block to start ing saved. with the oldest creation dates and saves data when there is no not supported media at the save destination. saving SET Binary format (MEM), text format (CSV) Divided saving (IDX) BMP, PNG, JPG CSV STARTUPSET If from all the channels available or from the displayed channels beasurement data. ata text format) is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 1,000,000 points of data Every 1,000,000 points of data OFF, By the calculation number sting files income and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation.	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded data Numerical calculations	Adding a serial the file when trans ON / OFF * Automatically se measuring proc * Settings files are * If a memory divi while data is bei Deletes the files free space left o * Enabled for auto Settings data Measurement data Index Displayed images Numerical calculation results Startup Select a channe when saving me Measurement direm 2 to 1000) Types of saved Binary format Text format Numerical calc results New files or exis * Enabled when re * Select whether the measure. Instant saving SSD USB MEMORY STICK Settings data Measurement data Startup	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. average the saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. a saving .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels beautement data. ata (text format) is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data culation OFF, By the calculation number ting files rumerical calculation results are saved. to create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX)	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded data	Adding a serial the file when trans ON / OFF * Automatically semeasuring proc Settings files are * If a memory divi while data is beid Deletes the files free space left or * Enabled for autor Settings data Measurement data Index Displayed images Numerical calculation results Startup Text format Numerical calcuration Text format Numerical calcuration Text format Numerical calcuration Select a channe when saving me Measurement data Numerical calcuration Text format Numerical calcuration Select a channe when saving me Measurement and Numerical calcuration Select Select when re * Select whether to measure. Instant saving SSD USB MEMORY STICK Settings data Measurement data Measurement data Index Startup titons	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. average the saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. a saving .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels beautement data. ata (text format) is culled according to the specified culling value before saving. I data Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data culation OFF, By the calculation number ting files rumerical calculation results are saved. to create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX)	
Processing identical filenames Auto saving Deleting and saving Types of saved data Saving channels Culled data saving File division Specifying files SAVE operation Loading data Loading source Types of loaded data Mumerical calculate Maximum number of	Adding a serial the file when trans ON / OFF * Automatically se measuring proc Settings files are "If a memory divi while data is bei Deletes the files free space left to Enabled for aut Settings data Measurement data Index Displayed images Numerical calculation results Startup Text format New files or exis Enabled when r Select whether Instant saving Saving range SSD USB MEMORY STICK Settings data Measurement data Numerical calcresults New files or exis Enabled when r Select whether Instant saving Saving range SSD USB MEMORY STICK Settings data Measurement data Index Startup tions 108 items x Mea Full range or Spi	number at the beginning before saving (Date and time added after sterred by FTP) aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. aves the data obtained for the recording length at the end of a ess. average of the next block to start ing saved. with the oldest creation dates and saves data when there is no in the specified media at the save destination. 3 saving SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) .BMP, .PNG, .JPG .CSV STARTUP.SET If from all the channels available or from the displayed channels beautement data. ata (text format) is culled according to the specified culling value before saving. Idata Division method OFF, Every 16 MB of data, Every 32 MB of data, Every 64 MB of data OFF, Every 60,000 points of data, Every 1,000,000 points of data. Certain of the calculation number ting files culation OFF, By the calculation number ting files currencal calculation results are saved. to create a new file or add data to an existing file when starting to Use the SAVE operation to save data to a save destination, under a filename, and with saving settings that have been pre-set. Select the full range or a specific segment. * Enabled only when data is saved with the SAVE operation. Internal SSD (480 GB) Z4006 (16 GB) .SET Binary format (.MEM), text format (.CSV) Divided saving (.IDX) STARTUP.SET	

Calculation items	Peak to peal value, maximum value, minimum value, high level, low level, average value, RMS value, standard deviation, rise time (°), fall time (°), frequency (°), period (°), pulse duty ratio (°), pulse count, area value, X-Y area value, time difference (°), phase difference (°), time to maximum value, time to minimum value, specified level time, specified time level, pulse width (°), four arithmetic operations, median value, amplitude, integration value burst width (°), XY waveform angle, overshoot, undershoot, + Width (°), - Width (°) *Calculations for statistical function *Tarroted* **Analog channels logic channels waveform processing.**		
	Targeted waveforms	Analog channels, logic channels, waveform processing channels	
Numerical judgment	Judgment		
Numerical judgment	settings	ON/OFF	
	Stop conditions	PASS, FAIL, PASS&FAIL	
Waveform proces	sing		
Maximum number of calculations	16 formulas		
Calculation range	Full range or Sp	ecified segments	
Maximum recording	2,000,000 point	S	
length Standard operator	+,-,×,÷		
Calculation items	TAN, ATAN, diffe	square root, logarithm, exponentiation, SIN, ASIN, COS, ACOS, erentiation, secondary differentiation, integration, secondary ing average, slide, PLCS	
Memory segment	ation		
Max. divisions	1024 blocks		
Block search		data that is saved in divided memory block.	
Past waveform comparison		measured waveform data into the desired block area and creen to the current waveform.	
Bulk save	Saves a huge ra	nge of data in all blocks	
Display	Specify a block	to display.	
Waveform search		Level, window-in, window-out	
	Trigger	If a logic channel is chosen as the target channel, searches can be made using logic triggers.	
Search methods	Peak	Maximum, minimum, local maximum, local minimum Histogram or standard deviation	
	Concierge	*Choose to compare to corresponding fundamental waves or	
	luma	immediately prior waveforms. Event mark, cursor, time (specified as absolute time, relative time,	
	Jump	or number of points), trigger point, search mark	
Search range	Full range Specified	All data stored in internal memory	
	interval	Choose a range specified by A/B or C/D.	
Search count	Up to 10,000 poi	nts cified number of search targets remain in the search range after	
Continuous search	performing a sea point.	rch, you can continue to search waveform data after the last search	
Other	Specify a searc	n location to display the data.	
Auto range	automatically se	npling rate and measurement range for the input waveform are tt. th external sampling	
Beep sound		, Alarm and operation	
	Sending e-mails Sending		
Sending e-mails	timing Sent data	Automatic saving, saving with the SAVE operation Attach data specified in the main text or files specified by a type of saved data.	
Initialization	Waveform data	initialization, setting initialization, complete initialization	
Self-check	Memory check,	LAN check, media check	
Language	Japanese, Engl	sh	
Error and warning display	Displays the det	ails of errors and warnings when they occur.	
Time value display	Hours, sexages	imal time, date, data values	
Zero position display	ON/OFF		
Waveform screen background color	Black or white		
Restart permission	restarted.	tings are changed during the measuring process, the unit is	
Time actions	* Not permitted: Settings cannot be changed during the measuring process.		
Time settings Number of current	Set the date and time.		
sensor connections		mbinations of Current Unit 8971, 3ch Current Unit 8977	
	8971 Current Unit	Max. 4	
Module limitations	U8977 3ch	Max. 3	
Woodio iiriitationis	Current Unit 8973 Logic	Max. 3	
	Unit	Supported locations (slots 25 to 27)	
	Green	POWER ON .	
POWER LED display	(flashing)	Aging in progress (for 30 minutes after the power is turned on)	
	Orange Not on	STANDBY (the power switch on the rear is on) Main power supply is off (the power switch on the rear is off)	
CMD ERR LED	Red	Syntax error in command received * Goes off with a CLS command.	
display	Not on	Or when a warning occurs No error or warning	
	Red	Ambient temperature is too high (> 35°C / 95°F)	
	Purple	Ambient temperature is too low (< 10°C / 50°F) CPU load factor 80% or more	
	Yellow	* The average load factor is updated every 0.5 seconds.	
DIAG LED display	Blue Green	The instrument is in the trigger standby state. Recording in progress	
		Recording in progress Recording finished. New command received, switches to	
	Pink White	normal display.	
	AALIIEG	Normal operation in progress (stopped)	

Option Specifications (sold separately)

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



ANALOG UNIT 89	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Measurement functions	No. of channels: 2, for voltage measurement
Input terminals	Isolated BNC connector (input impedance 1 M Ω , input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40, 100, 200, 400 V f.s., 12 ranges AC voltage for possible measurement/display: 280 V rms Low-pass filter: 5/50/500/5 k/50 k/500 kHz
Measurement resolution	1/2000 of measurement range (using 12-bit A/D conversion)
Maximum sampling rate	20 MS/s (simultaneous sampling in 2 channels)
Measurement accuracy	±0.5% f.s. (with filter 5 Hz, zero position accuracy included)
Frequency characteristics	DC to 5 MHz -3 dB (with AC coupling: 7 Hz to 5 MHz -3 dB)
Input coupling	AC/DC/GND
Maximum input voltage	400 V DC (the maximum voltage that can be applied across input pins without damage)

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



4ch ANALOG UNI	T U8975 (Accuracy at 23 ±5 °C / 3 ±5 °F, 20 to 50 °s FIH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 4, for voltage measurement		
Input terminals	Isolated BNC connector (input impedance 1 $M\Omega$, input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Measurement range	4, 10, 20, 40, 100, 200 V f.s., 6 ranges AC voltage for possible measurement/display: 140 V rms Low-pass filter: 5/500/5 k/200 kHz		
Measurement resolution	n 1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	5 MS/s (simultaneous sampling in 4 channels)		
Measurement accuracy ±0.1% f.s. (with filter 5 Hz, zero position accuracy included)			
Frequency characteristics DC to 2 MHz -3 dB			
Input coupling DC / GND			
Maximum input voltage	200 V DC (the maximum voltage that can be applied across input pins without damage)		

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



4CH ANALOG UNIT U8978		(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Measurement functions No. of channels: 4, for		voltage measurement
Input terminals	Isolated BNC connector (input impedance 1 $M\Omega$, input capacitance 30 pF), Max. rated voltage to ground: 30 V AC or 60 V DC for direct input, 300 V AC, DC (CAT II) when combined with the 9665 (Between each input channel and the main unit, and between the input channels)	
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40 V f.s., 9 ranges Low-pass filter: 5/500/5 k/200 kHz	
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)	
Maximum sampling rate	5 MS/s (simultaneous sampling in 4 channels)	
Measurement accuracy ±0.3% f.s. (with filter 5		Hz, zero position accuracy included)
Frequency characteristics DC to 2 MHz -		
Input coupling	DC/GND	
Maximum input voltage	40 V DC (with direct in	nput), 400 V DC (with 9665)

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 260 g (9.2 oz) Accessories: None



DIGITAL VOLTMI MR8990	(Accuracy at 23 ±5°C/73 ±9°F, 80% RH after 30 minutes of warm- up time and calibration, Accuracy guaranteed for 1 year, Post- adjustment accuracy guaranteed for 1 year)	
Measurement functions	No. of channels: 2, for DC voltage measurement	
	Banana input connectors (Input impedance: 100 M Ω or higher with 100 mV f.s. to 10 V f.s. range, otherwise 10 M Ω)	
Input terminals	Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)	
Measurement range	100, 1000 mV f.s. 10, 100, 1000 V f.s., 5 ranges	
Measurement resolution	1/1,000,000 of measurement range (using 24-bit ΔΣ modulation A/D)	
Integration time	20 ms × NPLC (during 50 Hz), 16.67 ms × NPLC (during 60 Hz)	
Response time	2 ms +2 x integration time or less (rise - f.s. \rightarrow + f.s., fall + f.s. \rightarrow - f.s.)	
Basic measurement accuracy	±0.01% rdg. ±0.0025% f.s. (at range of 1000 mV f.s.)	
Maximum input voltage	500 V DC (the maximum voltage that can be applied across input pins without damage)	

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



DIGITAL VOLTME	TER UNIT U8991	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80 % RH after 30 minutes of warm-up time; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Measurement functions	No. of channels: 4, for DC voltage measurement	
	Isolated BNC connectors (In otherwise 10 MΩ)	put impedance: 100 M Ω or higher with 1 V f.s. to 10 V f.s. range,
Input terminals	Max. rated voltage to ground: 100 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)	
Measurement range	1, 10, 100 V f.s., 3 ranges	
Measurement resolution	1/1,000,000 of measurement range (using 24-bit ΔΣ modulation A/D)	
Integration time	20 ms × NPLC (during 50 Hz), 16.67 ms × NPLC (during 60 Hz)	
Basic measurement accuracy	±0.02% rdg. ±0.0025% f.s.	
Maximum input voltage	100 V DC (the maximum voltage that can be applied across input pins without damage)	

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None




DC/RMS UNIT 897	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year		
Measurement functions	No. of channels: 2, for voltage measurement, DC/RMS selectable		
Input terminals	Isolated BNC connector (input impedance 1 MQ, input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40, 100, 200, 400 V f.s., 12 ranges AC voltage for possible measurement/display: 280 V rms Low-pass filter: 5/50/500/5 k/100 kHz		
Measurement resolution	1/2000 of measurement range (using 12-bit A/D conversion)		
Maximum sampling rate	1 MS/s (simultaneous sampling in 2 channels)		
Measurement accuracy	±0.5% f.s. (with filter 5 Hz, zero position accuracy included)		
RMS measurement	RMS accuracy: ±1% f.s. (DC, 30 Hz to 1 kHz) ±3% f.s. (1 kHz to 100 kHz) Response time: SLOW 5 s (rise time from 0 to 90% of full scale), MID 800 ms (rise time from 0 to 90% of full scale), FAST 100 ms (rise time from 0 to 90% of full scale) Crest factor: 2		
Frequency characteristics	DC to 400 kHz -3 dB (with AC coupling: 7 Hz to 400 kHz -3 dB)		
Input coupling	AC/DC/GND		
Maximum input voltage	400 V DC (the maximum voltage that can be applied across input pins without damage)		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



HIGH RESOLUTI 8968	ON UNIT (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for voltage measurement		
Input terminals	Isolated BNC connector (input impedance 1 M Ω , input capacitance 30 pF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Measurement range	100, 200, 400 mV f.s. 1, 2, 4, 10, 20, 40, 100, 200, 400 V f.s., 12 ranges AC voltage for possible measurement/display: 280 V rms Low-pass filter: 5/50/500/5 k/50 kHz		
Anti-aliasing filter	Integrated filter for suppressing aliasing distortion caused by FFT processing (automatic cutoff frequency setting/OFF)		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	1 MS/s (simultaneous sampling in 2 channels)		
Measurement accuracy	±0.3% f.s. (with filter 5 Hz, zero position accuracy included)		
Frequency characteristics	DC to 100 kHz -3 dB (with AC coupling: 7 Hz to 100 kHz -3 dB)		
Input coupling	AC/DC/GND		
Maximum input voltage	400 V DC (the maximum voltage that can be applied across input pins without damage)		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



U8977	and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 3, Current measurement with optional current sensor		
Input terminals	Dedicated connector terminal (ME15W) (input impedance 1 MΩ, common GND with recorder)		
Compatible current sensors	9272-05, CT6841-05, CT6843-05, CT6844-05, CT6845-05, CT6846-05, CT6865-05, 9709-05, CT6904, CT6865-05, CT6876, CT67636, CT7636, CT7642, CT7731, CT7736, CT7742, CT7044, CT7045, CT7046 (Connection using optional CONVERSION CABLE CT9920)		
Measurement range	- Directly connected current sensor: Automatically identify rating of compatible current sensors Using 9277-05 (20 A), CT6841-05: 2 A to 100 A f.s., 6 ranges Using CT6862-05: 4 A to 200 A f.s., 6 ranges Using CT6862-05: 4 A to 200 A f.s., 6 ranges Using CT6842-05, CT6845-05, CT6863-05: 20 A to 1000 A f.s., 6 ranges Using CT6844-05, CT6845-05, 9709-05, CT6904, CT6875: 40 A to 2000 A f.s., 6 ranges Using CT6846-05, CT6865-05, CT6876: 80 A to 4000 A f.s., 6 ranges - Current sensors connected using CT9920: Select conversion rate or model Using CT7631, CT7731: 200 A, 1 range Using CT7636, CT7736: 200 A to 1000 A, 3 ranges Using CT7642, CT7742: 2000 A/4000 A, 2 ranges Using CT7044, CT7045, CT7046: 2000 A to 10,000 A, 3 ranges		
Measurement accuracy (with 5 Hz filter ON) Note: Add the accuracy and attributes of the current sensor being used.	±0.3% f.s. Frequency characteristics: DC to 2 MHz ±3 dB		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	5 MS/s (simultaneous sampling in 3 channels)		
Other functions	Input coupling: DC/GND, Low-pass filter: 5/500/5 k/200 kHz		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: CONVERSION CABLE 9318 \times 2 (To connect the current sensor to the 8971)




CURRENT UNIT 8	971 (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, Current measurement with optional current sensor		
Input terminals	Sensor connector (input impedance 1 M Ω , exclusive connector for current sensor via the CONVERSION CABLE 9318, common GND with recorder)		
Compatible current sensors	CT6862, CT6863, 9709, CT6865, CT6841, CT6843, CT6844, CT6845, CT6846, 9272-10 (To connect to the 8971 via the CONVERSION CABLE 9318)		
Measurement range	Using 9272-10 (20 A), CT6841: 2 A to 100 A f.s., 6 ranges Using CT6862: 4 A to 200 A f.s., 6 ranges Using 9272-10 (200 A), CT6843, CT6863: 20 A to 1000 A f.s., 6 ranges Using CT6844, CT6845, 9709, CT6846*1, CT6865*1: 40 A to 2000 A f.s., 6 ranges *1: The conversion ratio needs to be set to 2 for scaling.		
Measurement accuracy (with 5 Hz filter ON) Note: Add the accuracy and attributes of the current sensor being used.	±0.65% f.s. RMS accuracy: ±1% f.s. (DC, 30 Hz to 1 kHz), ±3% f.s. (1 kHz to 10 kHz) RMS response time: 100 ms (rise time from 0 to 90% of full scale) Crest factor: 2 Frequency characteristics: DC to 100 kHz ±3 dB (with AC coupling: 7 Hz to 100 kHz)		
Measurement resolution	1/2000 of measurement range (using 12-bit A/D conversion)		
Maximum sampling rate	1 MS/s (simultaneous sampling in 2 channels)		
Other functions	Input coupling: AC/DC/GND, Low-pass filter: 5/50/500/5 k/50 kHz		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz)



HIGH-VOLTAGE U	NIT U8974 (Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for voltage measurement, DC/RMS selectable Max. rated voltage to ground: 1000 V AC, DC for measurement category III, 600 V AC, DC for measurement category IV		
Input terminals	Banana input terminal (Input impedance: 4 MΩ, Input capacitance: 5 pF)		
Measurement range	4, 10, 20, 40, 100, 200, 400, 1000 V fs. (DC mode), 8 ranges 10, 20, 40, 100, 200, 400, 1000 V fs. (RMS mode), 7 ranges Low-pass filter: 5/50/500/5 k/50 kHz		
Measurement resolution	1/32,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	1 MS/s		
Measurement accuracy	±0.25% f.s. (with filter 5 Hz, zero position accuracy included)		
RMS measurement	RMS accuracy: ±1.5% f.s. (DC, 30 Hz to 1 kHz), ±3% f.s. (1 kHz to 100 kHz) Response time: High speed 150 ms, medium speed 500 ms, low speed 2.5 s		
Frequency characteristics	DC to 100 kHz -3 dB		
Input coupling	DC/GND		
Maximum input voltage	1000 V DC, 700 V AC		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 245 g (8.6 oz) Accessories: CONVERSION CABLE L9769 \times 2 (Cable length: 60 cm)

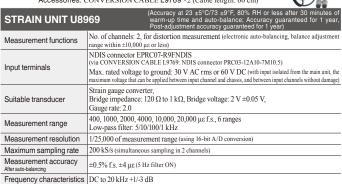

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 204.5 mm (8.05 in) D, approx. 240 g (8.5 oz) Accessories: Ferrite clamp \times 2



TEMP UNIT 8967	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm- up time and zero adjustment, Accuracy guaranteed for 1 year, Post- adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for temperature measurement with thermocouple (voltage measurement not available)		
Input terminals	Thermocouple input: Push-button terminal block, Recommended wire diameter: single-wire 0.14 to 1.5 mm², braided wire 0.14 to 1.0 mm² (conductor wire diameter ϕ 0.18 mm or more), AWG 26 to 16 Input impedance: min. 5 M Ω (with line fault detection ON/OFF) Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Temperature measurement range Note: Upper and lower limit values depend on the thermocouple	200°C (392°F) f.s. (-100°C to 200°C (-148°F to 392°F)), 1000°C (1832°F) f.s. (-200°C to 1000°C (-328°F to 1832°F)), 2000°C (3632°F) f.s. (-200°C to 2000°C (-328°F to 3632°F)), 3 ranges Measurement resolution: 1/20,000 of measurement range (using 16-bit A/D conversion)		
Thermocouple range (JIS C 1602-1995) (ASTM E-988-96)	K: -200°C to 1350°C (-328°F to 2462°F), R: 0°C to 1700°C (32°F to 3092°F), F: -200°C to 1100°C (-528°F to 2012°F), S: 0°C to 1700°C (32°F to 3092°F), E: -200°C to 800°C (-328°F to 1472°F), B: 400°C to 1800°C (752°F to 3272°F), W: -200°C to 1300°C (-328°F to 2372°F), W: -200°C to 1300°C (-328°F to 2372°F), The second of the		
	Reference junction compensation: internal/external (switchable), line fault detection ON/OFF possible		
Data refresh rate	3 methods, Fast: 1.2 ms (digital filter OFF), Normal: 100 ms (digital filter 50/60 Hz), Slow: 500 ms (digital filter 10 Hz)		
Measurement accuracy	Thermocouple K, J, E, T, N: $\pm 0.1\%$ f.s. $\pm 1^{\circ}$ C ($\pm 1.8^{\circ}$ F), ($\pm 0.1\%$ f.s. $\pm 2^{\circ}$ C ($\pm 3.6^{\circ}$ F) at -200° C ($\pm 3.8^{\circ}$ F to $\pm 32^{\circ}$ F) in Thermocouple R, S, B, W: $\pm 0.1\%$ f.s. $\pm 3.5^{\circ}$ C ($\pm 6.3^{\circ}$ F) (at 0° C ($\pm 3.6^{\circ}$ F) to less than 400°C ($\pm 3.6^{\circ}$ F). However, no accuracy guarantee at less than $\pm 400^{\circ}$ C ($\pm 3.6^{\circ}$ F) (at $\pm 400^{\circ}$ C ($\pm 3.6^{\circ}$ F) (or more) Reference junction compensation [RJC] accuracy: $\pm 1.5^{\circ}$ C ($\pm 2.7^{\circ}$ F) (added to measurem accuracy with internal reference junction compensation)		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 250 g (8.8 oz) Accessories: None



FREQ UNIT 8970	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80 % RH after 30 minutes of warm- up time; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for voltage input based frequency measurement, rotation, power frequency, integration, pulse duty ratio, pulse width		
Input terminals	Isolated BNC connector (input impedance 1 MQ, input capacitance 30 pF), Max. rated voltage to ground: 300 V AC, DC (with input isolated from the unit, the maximum voltage that can be applied between input channel and chassis and between input channels without damage)		
Frequency mode	Measurement range: Between DC to 100 kHz (minimum pulse width 2 μs), 20 Hz to 100 kHz f.s, 8 ranges Accuracy: ±0.1% f.s. (exclude 100 kHz range), ±0.7% f.s. (100 kHz range)		
Rotation mode	Measurement range: Between 0 to 2 million rotations/minute (minimum pulse width 2μs), 2 kr/min to 2 Mr/min f.s, 7 ranges Accuracy: ±0.1% f.s. (exclude 2 Mr/min range), ±0.7% f.s. (2 Mr/min range)		
Power frequency mode	Measurement range: 50 Hz (40 to 60 Hz), 60 Hz (50 to 70 Hz), 400 Hz (390 to 410 Hz), 3 ranges Accuracy: ±0.03 Hz (50, 60 Hz), ±0.1 Hz (400 Hz range)		
Integration mode	Measurement range: 40 k-counts f.s. to 20 M-counts f.s. 6 ranges Accuracy: ±0.0025% f.s.		
Duty ratio mode	Measurement range: Between 10 Hz to 100 kHz (minimum pulse width 2 μs), 100% f.s. Accuracy: ±1% (10 Hz to 10 kHz), ±4% (10 kHz to 100 kHz)		
Pulse width mode	Measurement range: Between 2 μs to 2 s, 10 ms to 2 s f.s. Accuracy: ±0.1% f.s.		
Measurement resolution	0.0025% f.s. (integration mode), 0.01% f.s. (exclude integration, power frequency mode), 0.01 Hz (power frequency mode)		
Input voltage range and threshold level	±10 V to ±400 V, 6 ranges, selectable threshold level at each range		
Other functions	Slope, Level, Hold, Smoothing, Low-pass filter, Switchable DC/AC input coupling, Frequency dividing, Integration over-range keep/return		

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 190 g (6.7 oz) Accessories: None



LOGIC UNIT 8973 No. of channels: 16 channels (4 ch/1 probe connector × 4 connectors) Measurement functions Mini DIN connector (for HIOKI logic probes only) Input terminals Compatible logic probes: 9320-01, 9327, MR9321-01

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz) Accessories: None



CHARGE UNIT U897	(Accuracy at 23 ±5°C/73 ±9°F, 20 to 80% RH after 30 minutes of warm-up time and zero adjustment, Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)		
Measurement functions	No. of channels: 2, for acceleration measurement		
Input terminals	Voltage input / pre-amp embedded input: Metal BNC connector (Under voltage input: input impedance 1 MQ, input capacitance 200 pF or less) Charge input: Miniature connector (#10-32UNF) Max. rated voltage to ground: 30 V AC or 60 V DC (with input isolated from the main unit, the maximum voltage that can be applied between input channel and chassis, and between input channels without damage) *Voltage input terminal GND and charge input terminal GND for the same channel are shared.		
Suitable transducer	Charge output type acceleration detector Pre-amp embedded acceleration detector		
Measurement range Charge input (Miniature connector) Pre-amp embedded input (BNC connector)	1 (m/s²) to 200 k (m/s²) f.s., 12 ranges x 6 types Charge input sensitivity: 0.1 to 10 pC /(m/s²) Pre-amp embedded sensor input sensitivity: 0.1 to 10 mV /(m/s²) Amplitude accuracy: ±2% f.s. Frequency characteristics: (1.5) to 50 kHz -3 dB (charge input) Low-pass filter: 500/s kHz Pre-amp supply power: 3.5 mA ±20%. 22 V ±5% Maximum input charge: ±500 pC (6 ranges on high sensitivity side), 50.000 pC (6 ranges on low sensitivity side)		
Measurement range Voltage input (BNC connector)	10 mV to 40 V f.s., 12 ranges, DC amplitude accuracy: ±0.5% f.s. Frequency characteristics: DC to 50 kHz -3 dB (with DC coupling), 1 Hz to 50 kHz -3 dB (with AC coupling) Low-pass filter: 5/500/5 kHz, input coupling: AC/DC/GND Maximum input voltage: 40 V DC		
Measurement resolution	1/25,000 of measurement range (using 16-bit A/D conversion)		
Maximum sampling rate	200 kS/s		
Anti-aliasing filter	Integrated filter for suppressing aliasing distortion caused by FFT processing (automatic cutoff frequency setting/OFF)		
TEDS	IEEE 1451.1.4 class 1 support (Support for sensor information reading and automatic sensitivity setting)		

Dimensions/mass: approx. 106~mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz) Accessories: None



WAVEFORM GEN MR8790	ERATOR UNIT	(Accuracy at 23 ±5°C/73 ±9°F, 80% RH after 30 minutes of warm-up time; Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year)
Output terminal	No. of channels: 4, SMB terminal (Output impedance: 1 Ω or less) Max. rated voltage to ground: 33 V rms AC or 70 V DC	
Output voltage range	-10 V to 10 V (Amplitude setting range: 0 V to 20 V p-p, Setting resolution: 1 mV)	
Max. output current	5 mA	
Output function	DC, Sine wave (Output frequency range: 0 Hz to 20 kHz)	
Accuracy	Amplitude accuracy: ±0.25% of setting ±2 mV p-p (1 Hz to 10 kHz) Offset accuracy: ±3 mV DC output accuracy: ±0.6 mV	
Other	Self-test function (Voltage, Current)	

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 230 g (8.1 oz) Accessories: None




PULSE GENERA	TOR UNIT MR8791	(Accuracy at 23 ±5°C/73 ±9°F, 80% RH or less with no condensation; accuracy guaranteed for 1 year)
Output terminal	No. of channels: 8, Connector: SCSI-2, half pitch, 50-pin Max: rated voltage to ground: 33 V rms AC or 70 V DC (between unit and output channels) Logic output/Open collector output	
Output mode 1	Pattern output: Read frequency: 0 Hz to 120 kHz, 2048 logic patterns	
	Pulse output: Frequency 0 Hz to 20 kHz, Duty 0.1% to 99.9%	
Output mode 2	Logic output: Output voltage l (H level: 3.8 V or more, L level: 0	
	Open collector output: Absolu Overcurrent protection: 100 m	te maximum rated voltage for collector/emitter 50 V
Other	Self-test function	

Dimensions/mass: approx. 106 mm (4.17 in) W \times 19.8 mm (0.78 in) H \times 196.5 mm (7.74 in) D, approx. 280 g (9.9 oz) Accessories: None



VIR GENERATOR	UNIT U8794 (Accuracy at 23 ±5°C/73 ±9°F, 80% RH or less with no condensation; accuracy guaranteed for 1 year)		
Output terminal	No. of channels: 8 (each channel is isolated), Connector: 25-pin D-sub Max. rated voltage to ground: 25 V		
Output items	DC voltage, DC current, resistance (simulated output)		
Output range Output accuracy	DC voltage: -0.100 0 V to +5.300 0 V (setting resolution: 0.1 mV) DC current:		
	5 mA range: -5.000 0 mA to +5.000 0 mA, Setting resolution: 0.1 μA 1 mA range: -1.000 00 mA to +1.000 00 mA, Setting resolution: 0.01 μA 250 μA range: -250.00 μ hA to +250.00 μA, Setting resolution: 0.01 μA 50 μA range: -50.000 μA to +50.000 μA, Setting resolution: 0.001 μA		
	Resistance: 10 Ω to 1 MΩ, Setting resolution: 6 digits DC voltage: 5 V range, ±0.035% of setting ± 800 μV		
	DC current: 5 mA range: ±0.050% of setting ± 4.0 μA 1 mA range: ±0.050% of setting ± 800 nA 250 μA range: ±0.050% of setting ± 200 nA 50 μA range: ±0.050% of setting ± 40 nA		
Other	Self diagnostic, switch output terminals, estimate target connection, cancel offset		

System Chart of Options

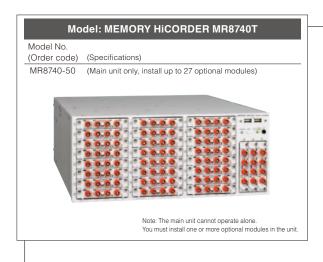

Storage media

'Use only the storage media sold by HIOKI. Compatibility and performance are not quaranteed for storage media made by other manufacturers. You may be read from or save data to such media



USB DRIVE Z4006 16 GB Using highly durable and reliable

SLC flash memory

PC Software (free)



Waveform Viewer Wv

Software for checking waveforms with binary data on a PC, saving data in CSV format, and transferring to spreadsheet programs

Operating environment Windows 10/8/7 (32/64-bit) Functions:

- Simple display of waveform files
 Convert binary data files to text format, CSV, etc.
- Scroll function, enlarge/reduce display, jump to cursor/trigger position, etc.



WAVE PROCESSOR 9335

PC display for massive amounts of waveform data and more

Logic signal measurement



LOGIC PROBE 9327 4-channel type, for voltage/contact signal ON/ OFF detection (response pulse width 100 ns or more, miniature terminal type)



LOGIC PROBE MR9321-01 4 isolated channels, ON/OFF detection of AC/ DC voltage (miniature terminal type)



LOGIC PROBE 9320-01 4-channel type, for voltage/contact signal ON/ OFF detection (response pulse width 500 ns or more, miniature terminal type)



CONNECTION CABLE L9795-01

Max. rated voltage to ground: 33 V AC rms or 70 V DC SMB terminal - alligator clip Cable length: 1.5 m (4.92 ft)



CONNECTION CABLE L9795-02 Max. rated voltage to ground 33 V AC rms or 70 V DC SMB terminal - BNC terminal

Cable length: 1.5 m (4.92 ft)

Input modules

Input cords not included. Please purchase them separately. When using the 9709 with CURRENT UNIT 8971, up to a total of



ANALOG UNIT 8966 2 ch, voltage input, 20 MS/s, (DC to 5 MHz)



4ch ANALOG UNIT U8975

4 ch, voltage input, 5 MS/s, (DC to 2 MHz)



4CH ANALOG UNIT U8978

4 ch, voltage input, 5 MS/s, (DC to 2 MHz), highest sensitivity range 100 mV f.s.



HIGH RESOLUTION UNIT 8968 2 ch, voltage input, 1 MS/s (DC to 100 kHz)

DC/RMS UNIT 8972



2 ch, voltage/1 MS/s, (DC to 400 kHz) RMS rectifier (DC, 30 to 100 kHz)



HIGH-VOLTAGE UNIT U8974 2 ch, voltage input, max. 1000 V DC and 700 V AC



DIGITAL VOLTMETER UNIT MR8990

2 ch, high-precision DC voltage, 0.1 μV resolution, maximum sampling rate 500 times/s



DIGITAL VOLTMETER UNIT U8991

4 ch, high-precision DC voltage, 1 µV resolution, maximum sampling rate 50 times/s



CURRENT UNIT 8971

2 ch, for measuring current using dedicated current sensors, 2 CONVERSION CABLES 9318 included, for use with up to 4 units



3CH CURRENT UNIT U8977

3 ch, for measuring current using dedicated current sensors, can be directly connected to ME15W (12-pin) connector-type sensors, for use with up to 3 units



TEMP UNIT 8967



STRAIN UNIT U8969 2 ch, strain gauge type converter amp



CONVERSION CABLE L9769 (for STRAIN UNIT U8969 only, included)

FREQ UNIT 8970

2 ch. for measurement of frequency, RPM, pulse, etc.



CHARGE UNIT U8979

2 ch, for acceleration measurement, supports charge output, pre-amp output, and voltage output



LOGIC UNIT 8973

4 terminals, 16 ch, up to 3 units (slots 25 to 27 only)

Output modules

* Output cords not included. Please purchase them separately * Configure settings with communication commands.



WAVEFORM GENERATOR UNIT MR8790 4ch, DC output ±10 V, Sine wave output 1 Hz to 20 kHz



PULSE GENERATOR UNIT MR8791 8ch, Pulse output 0.1 Hz to 20 kHz, Pattern output



VIR GENERATOR UNIT U8794 8ch, DC voltage output, DC current output, resistance output (simulated resistance)

SCI Monitor 4.0

HSCI-4.0-CAN FD



HSCI-4.0-SENT

CAN monitors, LIN monitors, and SENT monitors that are the same size as the MR8740T unit can be purchased from Nihon System Eight Co., Ltd. Power is supplied to a monitor when it is installed on the MR8740T. Note that it will not be possible to record or analyze the data with the MR8740T or HIOKI software. Please contact Nihon System Eight for additional information.

http://nse-inc.co.jp/

Por details, see product information on Hioki's website.

* Voltage is limited to the specifications of the **INPUT CORD (A)** CONNECTION CORD L9790

Flexible φ 4.1 mm (0.16 in) thin cable allowing for up to 600 V ir 1.8 m (5.91 ft) length * The end clip is sold separately.

ALLIGATOR CLIP L9790-01

Red/black set attaches to the ends of the cables L9790 GRABBER CLIP 9790-02

* When this clip is attached to the end of the L9790, input is limited to CAT II 300 V. Red/black set.

CONTACT PIN 9790-03

Red/black set attaches to the ends of the cables L9790

Voltage is limited to the specifications of th input modules in use. INPUT CORD (B)

CONNECTION CORD L9198 φ 5.0 mm (0.20 in) dia., cable allowing for up to 300 V input, 1.7 m

(5.58 ft) length, small alligator clip CONNECTION CORD L9197

 ϕ 5.0 mm (0.20 in) dia., cable allowing for up to 600 V input, 1.8 m (5.91 ft) length, detachable large alligator clips are bundled

GRABBER CLIP 9243

Attaches to the tip of the L9197, red/black set, full length: 196 mm (7.72 in)

Voltage is limited to the specifications of th INPUT CORD (C) input modules in use.

> 10:1 PROBE 9665 Max. rated voltage to ground is same as for input module, max. input voltage 1 kV rms (up to 500 kHz), 1.5 m (4.92 ft) length

100:1 PROBE 9666 Max. rated voltage to ground is same as for input module, max. input voltage 5 kV peak (up to 1 MHz), 1.5 m (4.92 ft) length

Voltage to ground is within this product's specifications. *Separate power source is also INPUT CORD (D) DIFFERENTIAL PROBE P9000-01

(Wave Only) For Memory HiCorder, 1 kV AC, DC, Frequency band: 100 kHz DIFFERENTIAL PROBE P9000-02

(Switch between Wave/RMS) For Memory HiCorder, 1 kV AC, DC, Frequency band: 100 kHz

AC ADAPTER Z1008 100 to 240 V AC

INPUT CORD (E)

Voltage to ground is within this product's specifications. *Separate power source is also

DIFFERENTIAL PROBE 9322 AC, 2 kV DC, Frequency bands

AC ADAPTER 9418-15

INPUT CORD (F)

CONNECTION CABLE L4940 Banana plug - banana plug, Cord length 1.5 m (4.92 ft)

EXTENSION CABLE L4931 Extend the length of banana plug cables, Cable length: 1.5 m (4.92 ft)

ALLIGATOR CLIP L4935 Attach to the tip of banana plug cables, CAT IV 600 V, CAT III 1000 V

BUS BAR CLIP L4936 Attach to the tip of banana plug cables, CAT III 600 V

MAGNETIC ADAPTER L4937 Attach to the tip of banana plug cables, CAT III 1000 V

GRABBER CLIP 9243 Attach to the tip of banana plug cables, red/black set, full length: 196 mm (7.72 in), CAT III 1000 V

* For the MR8990 *Voltage is limited to the specifications of the input modules in use. INPUT CORD (G)



High-precision current measurement *ME15W (12-pin) terminal type *Directly connect to U8977



High-precision pull-through current sensors, observe waveforms from DC to distorted AC AC/DC CURRENT SENSOR CT6862-05, 1 MHz, 50 A AC/DC CURRENT SENSOR CT6863-05, 500 kHz, 200 A Observe waveforms from DC to distorted AC

AC/DC CURRENT PROBE CT6841-05, 1 MHz, 20 A AC/DC CURRENT PROBE CT6843-05, 500 kHz, 200 A

CI AMP ON SENSOR 9272-05, 100 kHz, 200 A

High-precision pull-through current sensors, observe waveforms from DC to distorted AC AC/DC CURRENT SENSOR CT6875, 2 MHz, 500 A

AC/DC CURRENT SENSOR CT6876, 1.5 MHz, 1000 A Observe waveforms from DC to distorted AC AC/DC CURRENT PROBE CT6844-05, 200 kHz, 500 A AC/DC CURRENT PROBE CT6845-05, 100 kHz, 500 A AC/DC CURRENT PROBE CT6846-05, 20 kHz, 1000 A

Precautions when connecting the CURRENT UNIT 8971 with a high-precision current sensor High-precision current sensor (ME15W) + CT9901 + 9318 → CURRENT UNIT 8971

High-precision current sensor (ME15W) + CT955x + BNC cable → ex CURRENT UNIT 8971

CURRENT UNIT 8971 High-precision current sensor (PL23) + 9318 — CURRENT UNIT 8971 High-precision current sensor (PL23) + CT9900 + CT955x + BNC cable CURRENT UNIT 8971

The 9318 is bundled with the CURRENT UNIT 8971

bine the high-precision current sensor and the power supply 55) to perform current measurements with a voltage input unit. ensors with ME15W (12-pin) terminals (-05 type) can be connec

The separately available CONVERSION CABLE CT9900 is required in orde to use a sensor with a PL23 (10-pin) terminal.

POWER SUPPLY for Sensors SENSOR UNIT CT9555 1 ch, with waveform output

CONNECTION CORD L9217 Both cord ends are isolated BNC, 1.6 m (5.25 ft)


PL23 (10-pin) - ME15W (12-pin) conversio



CONVERSION CABLE CT9900 Convert PL23 (10-pin) terminal to ME15W (12-pin) terminal

y available CONVERSION CABLE CT9901 is required in high-precision current sensor equipped with a ME15W all (-05 type) with the CURRENT UNIT 8971. 55x is not required in order to use a sensor equipped with n) terminal with the 8971, the CONVERSION CABLE 9318 with the 8971) is required for that setup.

ME15W (12-pin) - PL23 (10-pin) conversion



Other current sensor types

The MEMORY HICORDER can be used with various types of current sensors and probes

U8977 only

10 mA class to 500 A (High speed)



CLAMP ON PROBE 3273-50 Frequency characteristics: DC to 50 MHz

wideband response, 10 mA-class up to 30 A rms CLAMP ON PROBE 3276

Frequency characteristics: DC to 100 MHz wideband response, 10 mA-class up to 30 A rms

CLAMP ON PROBE 3274 Frequency characteristics: DC to 10 MHz wideband response, up to 150 A rms

CLAMP ON PROBE 3275 Frequency characteristics: DC to 2 MHz wideband response, up to 500 A rms

Custom cable For P9000. Inquire with your local Hioki distributor.

(1) Bus powered USB cable (2) USB(A)- Micro B cable (3) 3-prong cable

Non-contact voltage measuring



NON-CONTACT AC VOLTAGE PROBE SP3000-01 5 V rms rated, 10 Hz to 100 kHz band width

NON-CONTACT AC VOLTAGE PROBE SP3000 Sold individually

AC VOLTAGE PROBE SP9001 Sold individually

Other options for input



CONNECTION CORD L9217 Cord has insulated BNC connectors at both ends, signal output use, 1.6 m (5.25 ft) length

CONVERSION ADAPTER 9199
Receiving side banana terminal, output BNC terminal

Temperature sensor



THERMOCOUPLE For reference only. Please purchase locally.

General-purpose current measurement *PL14 terminal type AC/DC AUTO 7FRO CURRENT SENSOR CT 7731

DC, 1 Hz to 5 kHz, 100 A AC/DC AUTO ZERO CURRENT SENSOR CT7736 DC, 1 Hz to 5 kHz, 600 A

AC/DC AUTO ZERO CURRENT SENSOR CT7742 DC, 1 Hz to 5 kHz, 2000 A

AC/DC CURRENT SENSOR CT7631 DC, 1 Hz to 10 kHz, 100 A AC/DC CURRENT SENSOR CT7636

DC. 1 Hz to 10 kHz. 600 A AC/DC CURRENT SENSOR CT7642

DC, 1 Hz to 10 kHz, 2000 A AC FLEXIBLE CURRENT SENSOR CT7044

100 mm (3.94 in), 6000 A AC FLEXIBLE CURRENT SENSOR CT7045 180 mm (7.09 in), 6000 A

AC FLEXIBLE CURRENT SENSOR CT7046 254 mm (10.00 in), 6000 A

eparately available CONVERSION CABLE CT9920 is red in order to connect a PL14 terminal general-purpose nt sensor to the CURRENT UNIT U8977.

PL14 - ME15W (12-pin) conversion



CONVERSION CABLE CT9920 Convert PL14 terminal to ME15W (12-pin)

Leak Current *For commercial power lines, 50/60 Hz



CLAMP ON LEAK HITESTER 3283 10 mA range / 10 µA resolution to 200 A range, with monitor / analog output 1 V f.s.

OUTPUT CORD L9095 Connect to BNC terminal, 1.5 m (4.92 ft) length AC ADAPTER 9445-02

100 to 240 V AC, 9 V/ 1 A

Precautions for connecting current sensors and current probes

*Depending on the combination of current sensors and current probes, physical and space limitations may prevent simultaneous connection. Hioki can assist with special order conversion cables please inquire with your local distributor.

*A total of 9 current sensors and current probes can be connected simultaneously to the Memory HiCorder. (Total with the CURRENT UNIT U8977, CURRENT UNIT 8971, and PROBE POWER UNIT Z5021 connected)

*Three U8977 current units and four 8971 current units can be simultaneously connected to the Memory

*Only the U8977 can use the CT9920 to convert a PL14 connector sensor. The 8971 does not support this combination.

INPUT CORD (H)



CONNECTION CORD 9166 BNC - clip, Cord length: 1.5m (4.92 ft)

The MR8740T supports your testing technologies with simultaneously sampled measurements across multiple channels.







Set examples

Multi-channel measurement for ECU development

In addition to the measurement of 68 analog channels + 24 logic channels, the MR8740T can also generate waveforms on 4 channels, generate pulses on 8 channels, and output DC voltage/DC current/ simulated resistance on 40 channels. This allows the simultaneous testing of multiple points, such as for high-performance boards, with a single unit.

MEMORY HICORDER	MR8740-50	1 unit
4ch ANALOG UNIT	U8975	17
CONNECTION CORD	L9790	68
ALLIGATOR CLIP	L9790-01	68
WAVEFORM GENERATOR UNIT	MR8790	1
CONNECTION CABLE	L9795-01	4
PULSE GENERATOR UNIT	MR8791	1
VIR GENERATOR UNIT	U8794	5
LOGIC UNIT	8973	3
LOGIC PROBE	9327	3

Support for a wide range of multi-channel measurements

High speed, isolation, and high precision are achieved even with multi-channel measurement.

High-speed isolated recording across 108 channels at 5 MS/s

MEMORY HICORDER	MR8740-50	1 unit
4ch ANALOG UNIT	U8975	27
CONNECTION CORD	L9790	108
ALLIGATOR CLIP	L9790-01	108

High-precision voltage measurements across 108 channels at a sampling rate of 50 times/s

MEMORY HICORDER	MR8740-50	1 unit
DIGITAL VOLTMETER UNIT	U8991	27
CONNECTION CORD	L9790	108
ALLIGATOR CLIP	L9790-01	108

Multi-channel strain measurements across 54 channels with a strain gauge converter

MEMORY HICORDER	MR8740-50	1 unit
STRAIN UNIT	U8969	27
CONVERSION CABLE	L9769	54

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies.



HEADQUARTERS 81 Koizumi, Ueda, Nagano 386-1192 Japan TEL +81-268-28-0562 FAX +81-268-28-0568 http://www.hioki.com / E-mail: os-com@hioki.co.jp DISTRIBUTED BY



HIOKI FMI 총판 태신상사(주)

서초 본사 | 02-3474-0070 구로 영업소 | 02-2689-4343 부산 영업소 | 051-806-9591 대구 영업소 | 053-604-3447 종로 영업소 | 02-3474-0070 성남 영업소 | 031-733-1090 광주 영업소 | 062-955-0057