# HIOKI

300"" 0 10- 50.

3159

3158

3154

C€

CE

CE

000

# INSULATION / VOLTAGE WITHSTAND TEST INSTRUMENT SERIES Safety Standards Measuring Instruments

0.20- 5.0.

- 0


3153

F

.........

6666 666

3.00

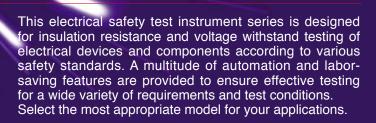

3153 AUTOMATIC INSULATION / WITHSTANDING HITESTER
3159 INSULATION / WITHSTANDING HITESTER
3158 AC WITHSTANDING VOLTAGE HITESTER
3154 DIGITAL MΩ HITESTER



ISO14001 JQA-E-90091



DANGER 1

HIOKI company overview, new products, environmental considerations and other information are available on our website.

# **Model 3153** Automatic Insulation Voltage Withstand Testing

# Voltage Control from a PC


# **Full Remote Control**

All test parameters can be controlled by RS-232C or GP-IB, including test voltage, cut-off current, resistance threshold and timer durations. Start-stop control can be provided with the **9613** single hand remote control or **9614** two-hand remote control.

# Standards-Based Testing

### **Comparator/Timer**

Includes built-in pass-fail comparator and timer functions for easy compliance testing to various safety standards such as those for Electrical Appliance Safety Regulations.

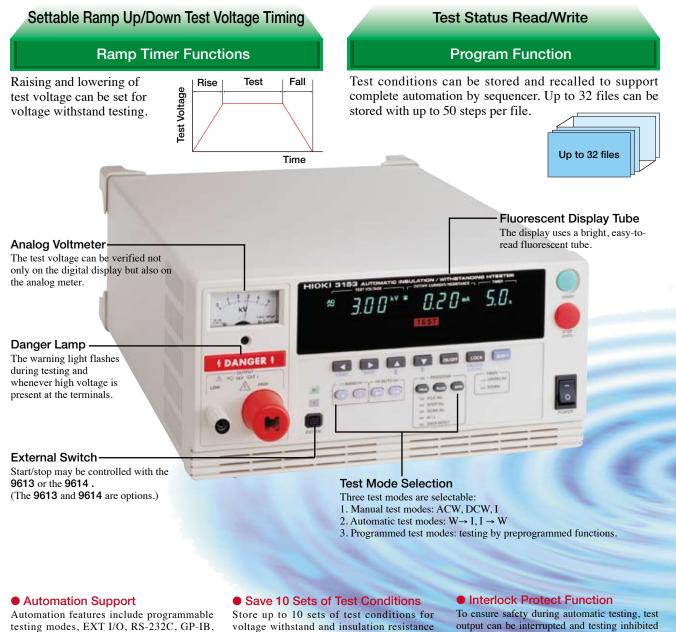

Automation features include programmable testing modes, EXT I/O, RS-232C, GP-IB, connection scanning and various data management functions.

#### Auto Discharge Feature

Any charge on the object under test is discharged by the test instrument, so there is no residual charge after testing. (DC voltage

# Zero-V Switching

test conditions. (Save/Load)

Test voltage on/off switching can be forced to occur only at sine wave zero-crossings. (AC voltage withstand testing)

modes, so you can quickly switch among the

To ensure safety during automatic testing, test output can be interrupted and testing inhibited by input signals from automatic sensing devices.

#### • PWM Switching Technique

Enhanced accuracy is obtained by preventing variations in supply voltage from affecting test voltage.

# Wide Range of Functions for Various Conditions

1. Pass Hold Function (0: No Hold, 1: Hold)


The pass state is held when it is activated. This is convenient for verifying the decision value.

2. Fail Hold Function (0: No Hold, 1: Hold)

The fail state is held when it is activated. This is convenient for temporarily stopping the test process.

- **3. Hold State (0: No Hold, 1: Hold)** This saves the state when the Stop key is pressed during a test to unconditionally end the test.
- 4. Momentary Out (0: Disabled, 1: Enabled) This function outputs a voltage only when the Start key is being pressed. The Start key is effective both for EXT SW and external I/O.
- 5. Double Action (0: Disabled, 1: Enabled) This function allows testing to start only if the Start key is pressed within a half second after the Stop key.
- 6. Fail Mode (0: Disabled, 1: Enabled) This function allows the Hold state to be released only by the Stop key on the instrument panel.
- 7. "START" Interface Command (0: Disabled, 1: Enabled) This specifies whether the "START" command is enabled.
- 8. Interlock Function (0: Disabled, 1: Enabled) This specifies whether the interlock terminal for external I/O is enabled.
- **9. Maximum Output Voltage** Sets the upper limit of the test voltage.
- 10. Insulation Resistance Measurement Range (0: Fixed Range, 1: Automatic Range)

This specifies whether the measurement range for insulation resistance testing should be fixed or automatically determined.

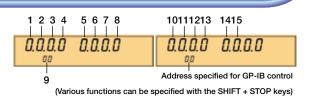

### 11. Insulation Resistance Test End Mode

0: Test for the specified time

- 1: Stop when "pass" is detected
- 2: Stop when "fail" is detected

This specifies the method of ending insulation resistance tests.

#### 12. Ramp Time Setting

0: No judgment during ramp-up

**1: Judgment during ramp-up** This specifies whether the judgment is enabled during ramp-up. Valid only during voltage withstand testing.

#### 13. PC Interface

0: RS-232C (PC, 9600 bps) 1: RS-232C (PC, 19200 bps) 2: GP-IB This specifies the type of PC interface to use.

#### 14. Electrical Discharge Function

**(0: Disabled, 1: Enabled)** This specifies whether the electrical discharge function is enabled at the end of testing.

#### 15. Test Signal Output

0: ON also when TEST indicator is flashing

- 1: OFF when TEST indicator is flashing
- 2: ON only when TEST indicator is flashing (excluding ramp down time) This specifies whether the TEST signal of the external I/

This specifies whether the TEST signal of the external I/ O should be output when the TEST indicator is flashing.

# **Enhanced System Measurements**

Maximum 32-Channel Multi-Point Testing

# Model 3930 HIGH VOLTAGE SCANNER

Combine Model **3153** with the **3930** HIGH VOLTAGE SCANNER to perform insulation withstand testing easily. Single-end inputs test up to 8 points (between any 4 points) per instrument, and can connect up to 4 instruments together.

#### Model 3930 Specifications

No. of Channels	Multi-Mode: 4 High-Low channels	
	Single-End Mode: 8 High-Common channels	
Operating Voltage	5 kV AC, 7 kV DC	
Action/Recovery Time	6 ms or less	
Supply Voltage	$24 \text{ V DC} \pm 5\%$ (at control signal input connector)	
Size & Mass	Approx. 320(W) × 90(H) × 250(D) mm, 3 kg.	

Simultaneous Protective Ground Continuity Testing

# Safety Inspection System

Combine Model 3153 with the 3157-01 AC GROUNDING HITESTER and a general-purpose sequencer for a simple safety test inspection system that includes protective ground continuity and insulation withstand testing.




Model 3157-01 AC GROUNDING HITESTER

Settable current ranges: 3.0 to 31 A AC

Max. output power: 130VA

Resistance measurement range: 0 to 1.800  $\Omega$ 

# **A Full Line-up of Models to Suit Various Needs**

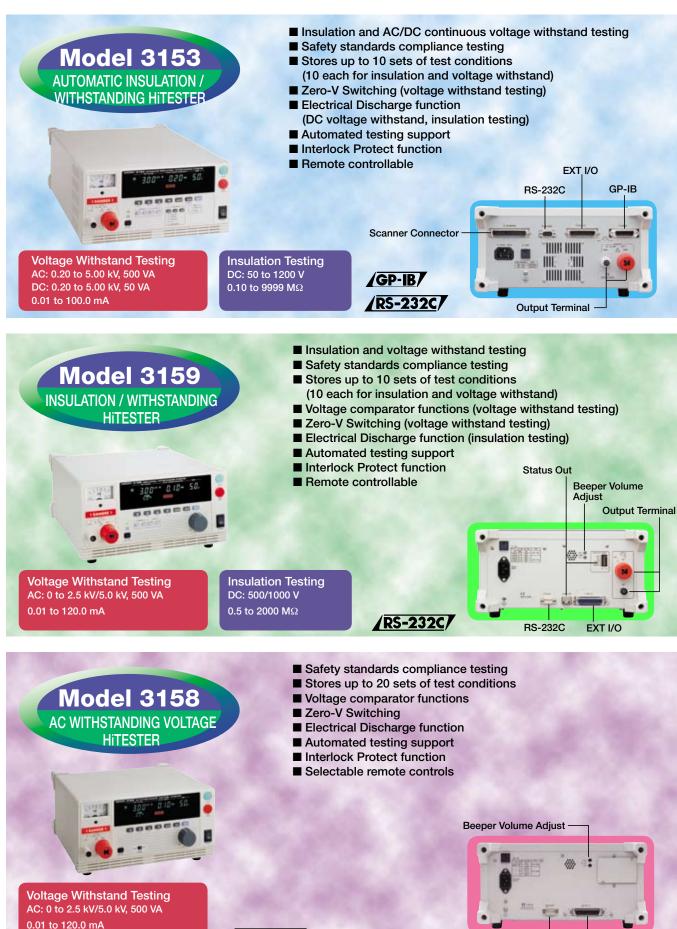

/RS-232C/

**RS-232C** 

EXT I/O

#### EXT I/O Output Signals

External control can be provided by various signals (signal lines have photocoupler isolation)

Pin	I/O	Signal	Function	
1	OUT	READY	LO when in "ready state"	
2	OUT	L-FAIL	LO when in "fail state" for the lower bound	
3	OUT	U-FAIL	LO when in "fail state" for the upper bound	
4	OUT	PASS	LO when in "pass state"	
5	OUT	TEST	LO when in "test state"	
6	OUT	H.V.ON	LO when voltage is present at the output terminals	
7	IN	EXT-E	When LO, external I/O input signals are enabled	
8	IN	START	When LO, it functions as a "Start" key	
9	IN	STOP	When LO, it functions as a "Stop" key	
10	IN	INT.LOCK	Interlock engaged when open	
11	OUT	W-MODE	LO during voltage withstand testing	
12	OUT	I-MODE	LO during insulation testing	
13	OUT	W-FAIL	LO when in "fail state" for voltage withstand testing	
14	OUT	I-FAIL	LO when in "fail state" for insulation testing	
15-16	IN	ISO.GND	Ground inputs for external devices	

Jiginai					
Pin	I/O	Signal	Function		
17-18	IN	EXT.COM	Common terminals for external devices		
19	OUT	STEP-END	LO when at the end of a step		
20	OUT	FILE-END	LO when at the end of a file		
21	IN	FILE-E	LO when FILE 0 to 4 is in use		
22	IN	FILE-0	File selection		
23	IN	FILE-1	File selection		
24	IN	FILE-2	File selection		
25	IN	FILE-3	File selection		
26	IN	FILE-4	File selection		
33-34	OUT	ISO.DCV	Internal power 5V DC (60 mA)		
35-36	IN	EXT.DCV	External power supply (5 to 30V DC)		

# Various Function Settings

- 1. PASS Hold function
- 2. FAIL Hold function
- 3. Hold function
- 4. Momentary out
- 5. Double actions
- 6. FAIL mode
- 7. "START" interface command
- 8. Interlock function
- 9. Maximum Output Voltage
- 10. Insulation Resistance measurement range
- 11. Insulation Resistance Test End mode
- 12. Ramp Timer setting
- 13.PC Interface
- 14. Electrical Discharge function
- 15. TEST signal output

## Status Out

When the output conditions set by the DIP switches are satisfied (OR condition), output is provided at relay contacts.

1. H.V.ON	Output voltage generation
2. TEST	Testing in progress
3. PASS	Passed
4. FAIL	Failed
5. INT.LOCK	Interlocked
6. READY	Ready
7. EXT.CONT.	Under external control
8. POWER.ON	Powers the 3159 on

Pin	I/O	Signal	Function	
1	OUT	READY	LO when in "ready state"	
2	OUT	L-FAIL	LO when in "fail state" for the lower bound	
3	OUT	U-FAIL	LO when in "fail state" for the upper bound	
4	OUT	PASS	LO when in "pass state"	
5	OUT	TEST	LO when in "test state"	
6	OUT	H.V.ON	LO when voltage is present at the output terminals	
7	IN	EXT-E	When LO, external I/O input signals are enabled	
8	IN	START	When LO, it functions as a "Start" key	
9	IN	STOP	When LO, it functions as a "Stop" key	
10	IN	INT.LOCK	Interlock engaged when open	
11	OUT	W-MODE	LO during voltage withstand testing	
12	OUT	I-MODE	LO during insulation testing	
13	OUT	W-FAIL	LO when in "fail state" for voltage withstand testing	
14	OUT	I-FAIL	LO when in "fail state" for insulation testing	
15-18	IN	ISO.COM	Ground inputs for external devices	
33-36	OUT	ISO.DCV	Internal power 15V DC (100 mA)	

- 1. PASS Hold function
- 2. FAIL Hold function
- 3. Hold function
- 4. Momentary out
- 5. Double actions
- 6. FAIL mode
- 7. "START" RS command
- 8. Interlock function
- 9. Voltage Comparator position
- 10. Insulation Resistance measurement range
- 11. Insulation Resistance Test End mode

Pin	I/O	Signal	Function		
1	OUT	READY	LO when in "ready state"		
2	OUT	L-FAIL	LO when in "fail state" for the lower bound		
3	OUT	U-FAIL	LO when in "fail state" for the upper bound		
4	OUT	PASS	LO when in "pass state"		
5	OUT	TEST	LO when in "test state"		
6	OUT	H.V.ON	LO when voltage is present at the output terminals		
7	IN	EXT-E	When LO, external I/O input signals are enabled		
8	IN	START	When LO, it functions as a "Start" key		
9	IN	STOP	When LO, it functions as a "Stop" key		
10	IN	INT.LOCK	Interlock engaged when open		
15-18	IN	ISO.COM	Ground inputs for external devices		
33-36	OUT	ISO.DCV	Internal power 15V DC (100 mA)		

- 1. PASS Hold function
- 2. FAIL Hold function
- 3. Hold function
- 4. Momentary out
- 5. Double actions
- 6. FAIL mode
- 7. "START" RS command
- 8. Interlock function
- 9. Voltage Comparator position

# Specifications

# ■ Voltage Withstand Testing

U	<u> </u>					
	Model AUTOMATIC INSULATION / 1		STER	Model 3159 INSULATION / WITHSTANDING HITESTER	Model 3158 AC WITHSTANDING VOLTAGE HITESTER	
	AC	DC		AC		
Output voltage	0.20 to 5.00 kV	0.20 to 5.00	) kV	Two ranges: AC 0 to 2.5 or 5.0 kV		
Voltage output method	PWM switching method (zero-switching)	PWM switching	g method	Zero-sv	vitching	
Transformer capacity	500 VA (rated 30 minutes)			500 VA (rate	1 30 minutes)	
Output capacity		50 VA (contir	1uous)			
Voltage adjustment method	Digital setting (0.01	kV setting resolution)		Manual a	djustment	
Output voltage accuracy	±1.5% of setti	ng voltage ±2 dgt.				
Voltage change rate	$\pm 7\%$ or less (max. 5 kV at 100 mA $\rightarrow$ unloaded: with resistive load)*2	±16% or la (max. 5 kV at10 mA with resistive l	$\rightarrow$ unloaded:			
Voltage waveform	Sine wave (5% or less distortion, unloaded)	,		Power waveform		
Voltage frequency	50 or 60 Hz ±0.2%			Power sync	hronization	
Output ripple voltage		6% of output volt (at 5 kV DC, 10 mA,				
Output current	100 mA *1	10 mA (contin	nuous)			
	Average rectified effective value displa	y Average dis	play	Average rectified effect	tive value display	
Voltmeter	Accurac Analog: 0 to 5 k	bigital: 0.00 to 5.00 kV (full scale) Accuracy: ±1.5% f.s. nalog: 0 to 5 kV (full scale) Accuracy: ±5% f.s.		Digital: 0.00 to 5.00 kV (full scale) Accuracy: ±1.5% f.s. Analog: 0 to 5 kV (full scale) Accuracy: ±5% f.s.a		
Current measurement range	0.01 to 100.0 mA	0.01 to 10.0	mA	0.01 to 1	20.0 mA	
Indicated value range	10 or 100 mA	10 mA		2, 8, 32 or 120 mA		
Measurement resolution	0.00 to 10.00 or 0.01 mA (10- 10.1 to 100.0 or 0.1 mA (100-	0,		0.01 mA (2- or 8-mA range), 0.1 mA (32-mA range), 1 mA (120-mA range)		
Current measurement accuracy	± (2% rdg. + 5 dgt.) c	ommon to each range *	⊧3	$\pm(3\%$ f.s. + 20 $\mu A)$ for all range	s (at 5% power distortion or less)	
*1. Time vs. Output Volt	age (at 23°C ambient)			ded = 40 M $\Omega$ load (instrument input in	pedance)	
Current Measurement Rang	e Max. Test Time	Standby Time	*3. Plus scanner accuracy, when used.			

 $60~\mathrm{mA} < 1 \leq 100~\mathrm{mA}$ 15 minutes

15 minutes

none

continuous

# ■ Insulation Resistance Testing

 $1 \leq 60 \ \mathrm{mA}$ 

	Model 3153	Model 3159	Model 3158
Test voltage	Output voltage: Positive polarity 50 to 1200V DC Voltage adjustment method: Digital setting (1V resolution) Output voltage accuracy: $\pm 1.5\% \pm 2$ dgt. of setting level	Rated voltage: 500 or 1000V DC Unloaded voltage: 1 to 1.2 times rated voltage	
Rated measurement current	l mA	1 to 1.2 mA	
Short-circuit current	200 mA or less	4 to 5 mA (500V) 2 to 3 mA (1000V)	
Voltmeter	Average display Digital: 0 to 1200V DC (full scale) Accuracy: ±1.5% rdg. ±2 dgt. Analog: 0 to 1200V DC	Average display Digital: 0 to 1200V DC (f.s.)	
	Analog: 0 to 1200 V DC Accuracy: ±5% f.s. (5 kV full scale)	Analog: not applicable	
Measurement range/ accuracy	0.100 to 1.049 MΩ 1.05 to 10.49 MΩ*1 10.5 to 104.9 MΩ*1 105 to 9999 MΩ*1 Fundamental accuracy: ±4% rdg.*2	0.5 to 999 MΩ (500V)/±4% rdg. 1 to 999 MΩ (1000V)/±4% rdg. 1000 to 2000 MΩ /±8% rdg.	

\*1. Measurement range changes according to test voltage. \*2. Plus scanner accuracy, when used.

### Decision Function

	Model 3153	Model 3159	Model 3158	
Decision method	Window comparison method (digital specification)			
Decision results	UPPER-FAIL: Measured current (insulation resistance value) exceeded the specified upper bound. PASS: Measured current (insulation resistance value) was between the specified upper and lower bounds during the specified time elapsed LOWER-FAIL: Measured current (insulation resistance value) was less than the specified lower bound (Note: Model 3158 has no insulation resistance function)			
Decision processing	For each decision result, output the display portion, the beeper sound, and EXT I/O signal			
Specification ranges	Voltage withstand testing:       ACV: 0.1 to 100 mA (upper bound) / 0.1 to 99 mA (lower bound)       Voltage withstand testing:         ACV: 0.1 to 100 mA (upper bound) / 0.1 to 99 mA (lower bound)       0.1 to 120 mA (upper bound) / 0.1 to 119 mA (lower bound)         DCV: 0.1 to 10 mA (upper bound) / 0.1 to 9.9 mA (lower bound)       Insulation testing: (Model 3159 only):         Insulation testing: 0.10 to 9999 MΩ (same upper/lower bounds)       0.2 to 2000 MΩ (same upper/lower bounds)			
Specification resolution	Voltage withstand testing: 0.1 mA (0.1 to 9.9 mA), 1 mA (10 to 100 mA) Insulation testing: 0.01 MΩ (0.10 to 9.99 MΩ), 0.1 MΩ (10.0 to 99.9 MΩ), 1 MΩ (100 to 9999 MΩ)	Voltage withstand testing: 0.1 mA (0.1 to 9.9 mA), 1 mA (10 to Insulation testing (Model 3159 only): 0.01 M $\Omega$ (0.2 to 2 M $\Omega$ ), 0.1 M $\Omega$ (2.1 1 M $\Omega$ (21 to 200 M $\Omega$ ), 10 M $\Omega$ (210 to	to 20 MΩ),	

#### Timers

	Model 3153	Model 3159	Model 3158	
Testing timer	Specification range: 0.3 to 999 s Specification resolution: 0.1 s (0.3 to 99.9 s), 1 s (100 to 999 s) Accuracy: ±0.5% of specified value	Specification range: 0.5 to 999 s           Specification resolution/accuracy:           0.1 s (0.5 to 99.9 s), ±50 ms; 1 s (100 to 999 s) ±0.5 s		
Action: (when ON is specificed) after starting, the countdown from the specified time is di (when OFF is specified) displays the elapsed time from starting				
Ramp timer (withstand test time)	Specification range: $0.1$ to $99.9$ s ramp-up and -down specified separately Specification resolution/accuracy: $0.1$ s, $\pm 0.5\%$ of specified value	,		
Delay timer (insulation resistance test time)	<ul> <li>Specification range: 0.1 to 99.9 s</li> <li>Specification resolution/accuracy: 0.1 s, ±0.5% of specified value</li> <li>Action: specify a delay time after testing is set to begin to inhibit decisions during that time</li> </ul>	Non-deterministic interval: 0.5 s (Mask time until determination begins during insulation resistance testing)		

### Interfaces

	Model 3153	Model 3159	Model 3158	
EXT I/O	Open-collector outputs, active low, max. 30V DC loaded voltage, all signal lines photocoupler-isolated			
EXT SW	START, STOP, SW.EN (panel terminal switch enabled), connection point inputs			
RS-232C	Start-stop synchronization, full duplex, 9600 or 19200 bps	Start-stop synchronization, full duplex, 9600 bps		
GP-IB	IEEE 488.2 (1987) compliant	-		

# General Specifications

	Model 3153	Model 3159	Model 3158		
Display	Fluorescent display tube (digital display), analog meter				
Monitor functions	Output voltage, detected current, measured resistance		Output voltage, detected current		
Monitor period	2 times per second minimum				
Operating temperature range	0 to 40 °C, 80% RH maximum (non-condensating)				
Storage temperature range	-10 to 50 °C, 90% RH maximum (non-condensating)				
Temperature and humidity range for guaranteed accuracy	23 ± 5 °C, 80% RH maximum (non-condensating) (after 10-min. war	rm-up for 3153, or 5-min. warm-up for	3158 and 3159)		
Operating environment	Indoors, up to 2000m ASL				
Power supply voltage	100 to 240V AC (installed fuse depends on actual voltage, so specify supply voltage when ordering) 100 to 120V AC: installed fuse 250V T10AL 200 to 240V AC: installed fuse 250V T5AL	100V AC (3159), 120V AC (3159-01), 220V AC (3159-02), 230V AC (3159-03), 240V AC (3159-04)	120V AC ( <b>3158-01</b> ), 220V AC ( <b>3158-03</b> ), 230V AC ( <b>3158-04</b> ), 240V AC ( <b>3158-05</b> )		
Power supply frequency	50 or 60 Hz				
Max. power consumption	1000 VA	800	VA		
Dimensions	Approx. 320 (W) × 155 (H) × 480 (D) mm	Approx. 320 (W) × 155 (H) × 330 (D) mm	Approx. 320 (W) × 155 (H) × 263 (D) mm		
Mass	Approx. 18 kg (3159), 20.5 kg (3159-01), 21.5 kg (3159-02 to 3159-04)		Approx. 16 kg ( <b>3158-01</b> ), 18 kg ( <b>3158-03 to 3159-05</b> )		
Supplied accessories	9615 H.V. TEST LEADS (high voltage side and return, one each), PC	WER CORD, EXTRA FUSE			
	9613 REMOTE CONTROL BOX (SINGLE), 9614 REMOTE CONTROL BOX (DUAL), 9637 RS-232C CABLE (9-pin Dsub to 9-pin Dsub), 9638 RS-232C CABLE (9-pin Dsub to 25-pin Dsub), 9267 SAFETY TEST DATA MANAGEMENT SOFTWARE				
Options	3930 HIGH VOLTAGE SCANNER 9151-02 GP-IB CONNECTOR CABLE (2m) 9151-04 GP-IB CONNECTOR CABLE (4m)	9616 WARNING LAMP			



- Six test voltages from 25 to 1000V
- Stores 10 setting states
- Easy standards testing with comparator timer function
- Automatic electrical discharge feature
- Minimize instability with slow sampling
- Record changes with analog output

[Measurement Voltage/Range (Auto/Manual range switching)]



Measurement voltage		25V	50V	100V	250V	500V	1000V
Measurement range		2.000, 20.00 and 200.0 $M\Omega$		2.000, 20.00 and 2000 MΩ		$2.000, 20.00, 200.0$ and 4000 $M\Omega$	
Accuracy	±2% rdg. ±5 dgt.		0 to 20.00 MΩ	•	0 to 100.0 MΩ	0 to 999 MΩ	
	±5% rdg.	19.0 to 200.0 MΩ		19.0 to 2000 MΩ	100.1 to 2000 MΩ	1000 to 4000 M $\Omega$	
Unloaded voltage		1 to 1.2 times the measurement voltage					
Min. meas. resistance		0.025 MΩ	0.05 MΩ	0.1 MΩ	0.25MΩ	0.5MΩ	2MΩ
Rated meas. current		1 to 1.2 mA					0.5 to 0.6 mA
Short	-circuit current	1.2 mA or less					0.6 mA or less

#### 3153 AUTOMATIC INSULATION / WITHSTANDING HITESTER

#### Options

7

3930 HIGH VOLTAGE SCANNER
9613 REMOTE CONTROL BOX (SINGLE)
9614 REMOTE CONTROL BOX (DUAL)
9151-02 GP-IB CONNECTOR CABLE (2m)
9151-04 GP-IB CONNECTOR CABLE (4m)
9637 RS-232C CABLE (1.8 m) (9pin-9pin/Cross)
9638 RS-232C CABLE (1.8 m) (9pin-25pin/Cross)
9267 SAFETY TEST DATA MANAGEMENT SOFTWARE

3158-01 AC WITHSTANDING VOLTAGE HITESTER (120V AC) 3158-03 AC WITHSTANDING VOLTAGE HITESTER (220V AC) 3158-04 AC WITHSTANDING VOLTAGE HITESTER (230V AC) 3158-05 AC WITHSTANDING VOLTAGE HITESTER (240V AC)

#### Options

9613 REMOTE CONTROL BOX (SINGLE)
9614 REMOTE CONTROL BOX (DUAL)
9637 RS-232C CABLE (1.8 m) (9pin-9pin/Cross)
9638 RS-232C CABLE (1.8 m) (9pin-25pin/Cross)
9267 SAFETY TEST DATA MANAGEMENT SOFTWARE

31 59 INSULATION / WITHSTANDING HITESTER (100V AC) 31 59-01 INSULATION / WITHSTANDING HITESTER (120V AC) 31 59-02 INSULATION / WITHSTANDING HITESTER (220V AC) 31 59-03 INSULATION / WITHSTANDING HITESTER (230V AC) 31 59-04 INSULATION / WITHSTANDING HITESTER (240V AC)

#### Options

9613 REMOTE CONTROL BOX (SINGLE)
9614 REMOTE CONTROL BOX (DUAL)
9616 WARNING LAMP
9637 RS-232C CABLE (1.8 m) (9pin-9pin/Cross)
9638 RS-232C CABLE (1.8 m) (9pin-25pin/Cross)
9267 SAFETY TEST DATA MANAGEMENT SOFTWARE



REMOTE CONTROL BOX (SINGLE)

DISTRIBUTED BY





9614 REMOTE CONTROL BOX (DUAL)



9616 WARNING LAMP (100V AC, 0.1A)

When using Model 9616 with Models 3153 or 3158, please contact HIOKI for specific details.



HIOKI E. E. CORPORATION

#### HEAD OFFICE :

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 / FAX +81-268-28-0568 E-mail: os-com@hioki.co.jp

HIOKI USA CORPORATION : 6 Corporate Drive, Cranbury, NJ 08512 USA TEL +1-609-409-9109 / FAX +1-609-409-9108 E-mail: hioki@hiokiusa.com 
 HIOKI (Shanghai) Sales & Trading Co., Ltd. :

 1904 Shanghai Times Square Office, 93 Huai Hai Zhong Road

 Shanghai, P.R.China POSTCODE: 200021

 TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360

 E-mail: info-sh@hioki.cn

 Beijing Office :

 A-2602 Freetown, 58 Dong San Huan Nan Road

 Beijing, P.R.China POSTCODE: 100022

 TEL +86-10-5867-4080/4081 FAX +86-10-5867-4090

 E-mail: info-bj@hioki.cn

 Guangzhou Office :

 Room 303, Profit Plaza, No.76, West Huangpu Road

 Guangzhou, P.R.China POSTCODE: 510623

 TEL +86-20-38392673/2676 FAX +86-20-38392679

All information correct as of Jun. 29, 2007. All specifications are subject to change without notice.

mail: info-gz@hioki.cn